


INSTALLATION INSTRUCTIONS

Snow Plow Mount for Polaris RZR®

Item	Description
A	Mount Plate
B	Front Bar
C	Roller Bracket, L
D	Roller Bracket, R

Item	Description
E	Roller
G	Pull Bar
H*	Winch Plate

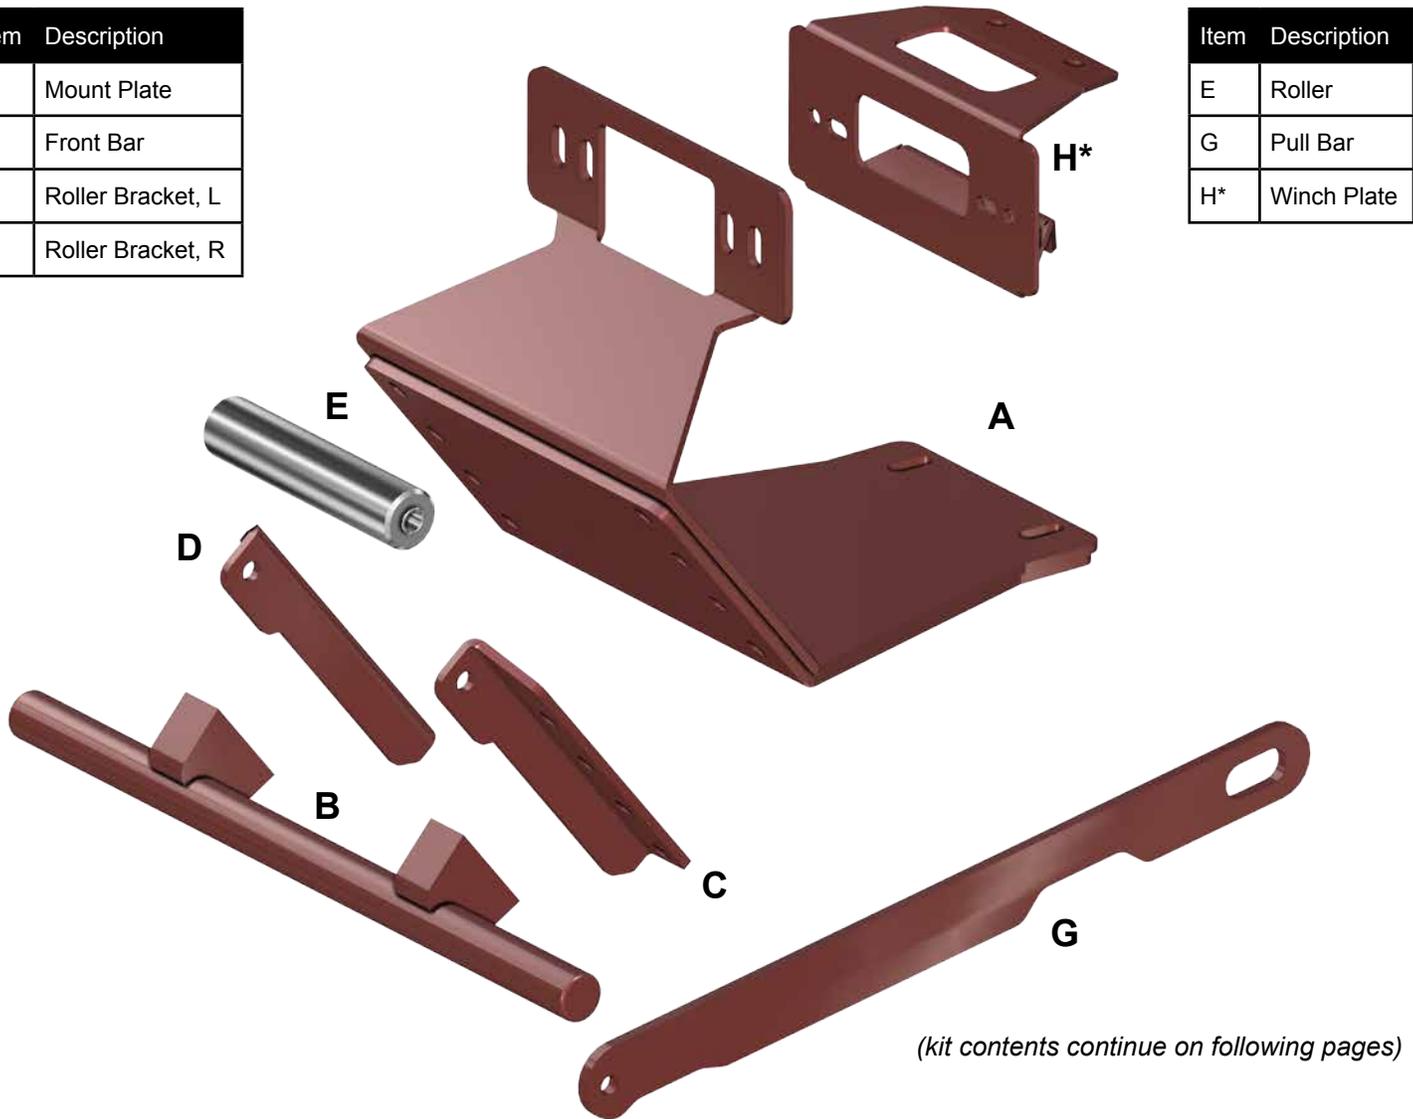

(kit contents continue on following pages)

*Use Winch Plate (H) if SuperATV Winch or Winch Mount are **NOT** installed.

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

*Thank You
For Choosing*



Liability Statement



SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

(kit contents continued)

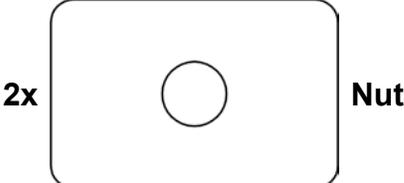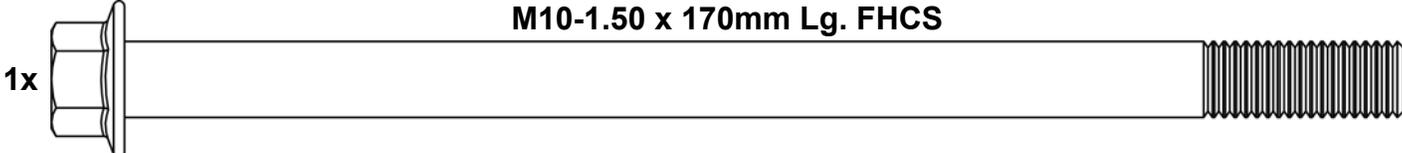




If Front Bar does not included welded spacers, install Front Bar Spacers to Front Bar as shown.

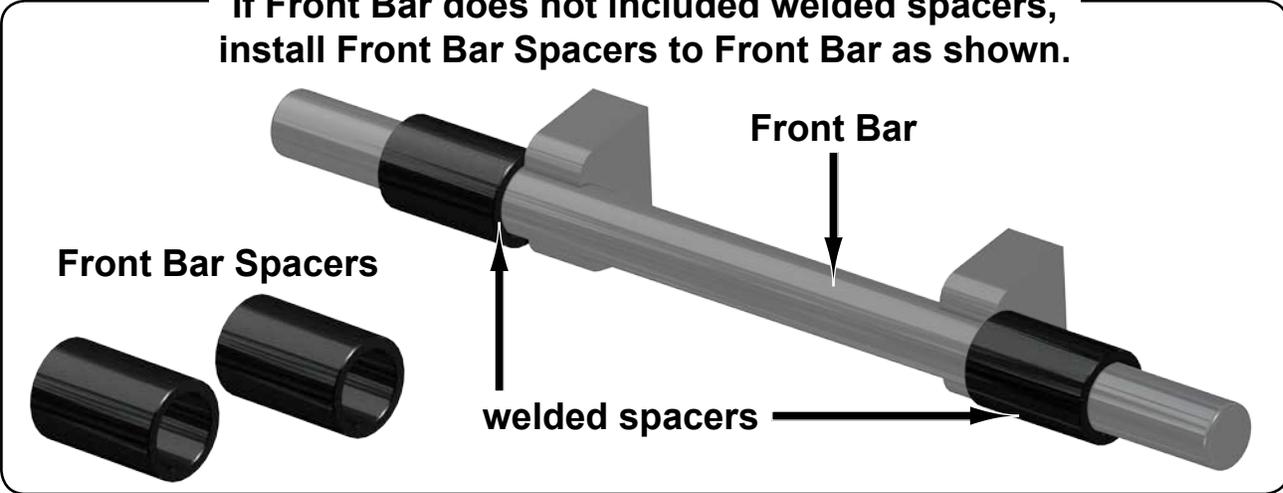

Reference only; do not assemble at this time.

Item	Description
A	Mount Plate
B	Front Bar
C	Roller Bracket, L
D	Roller Bracket, R
E	Roller
H*	Winch Plate

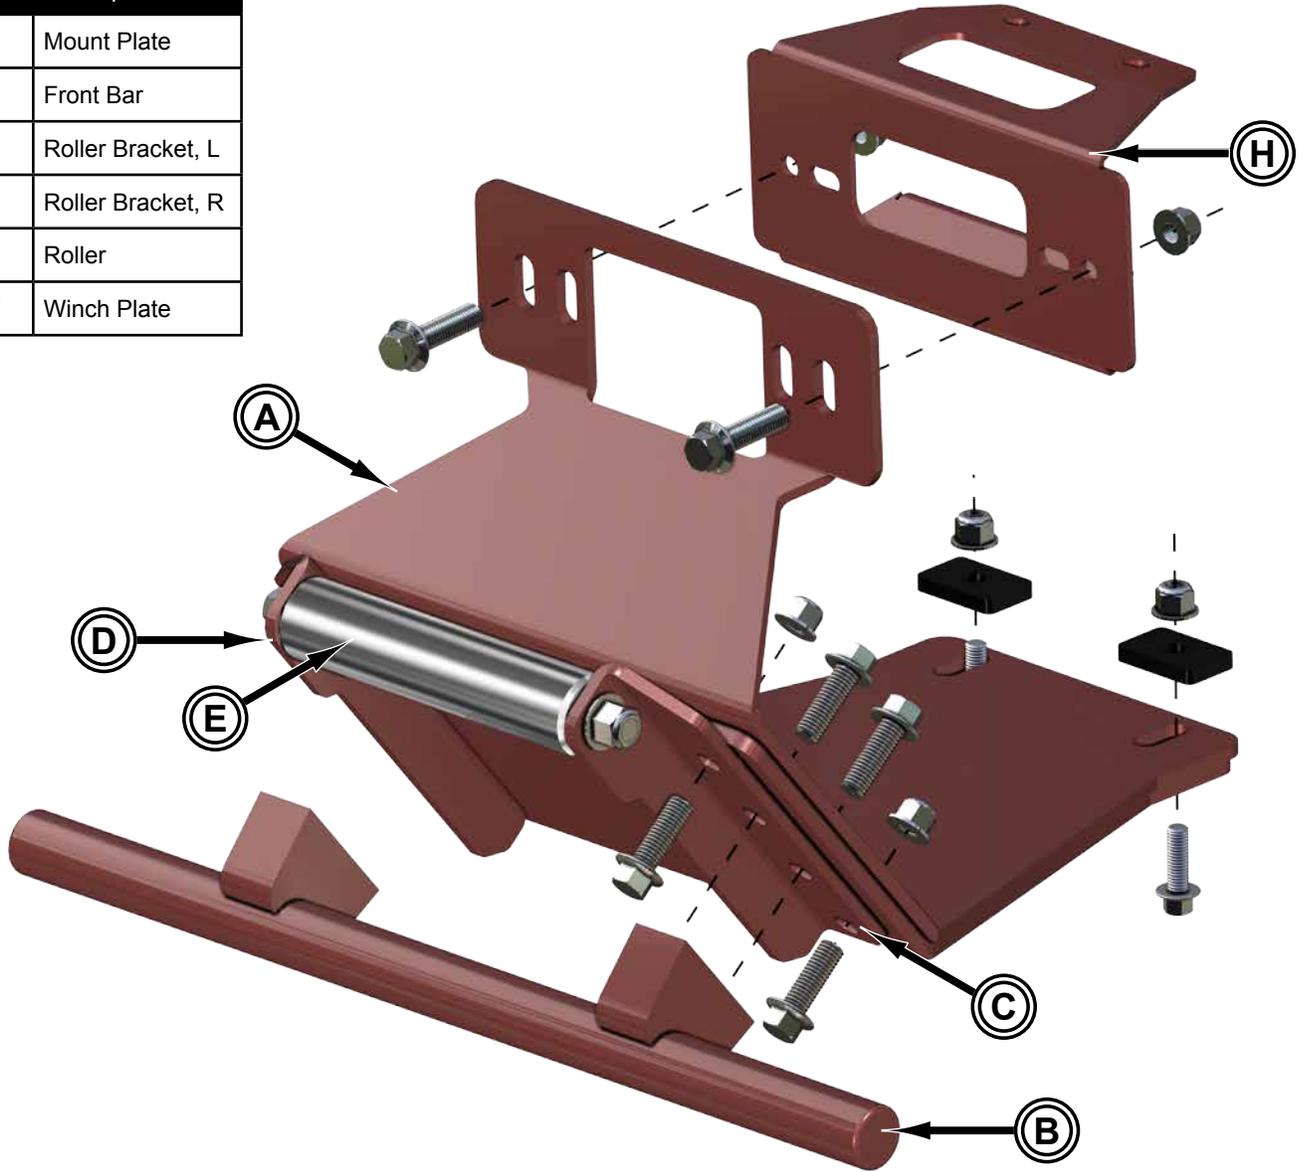

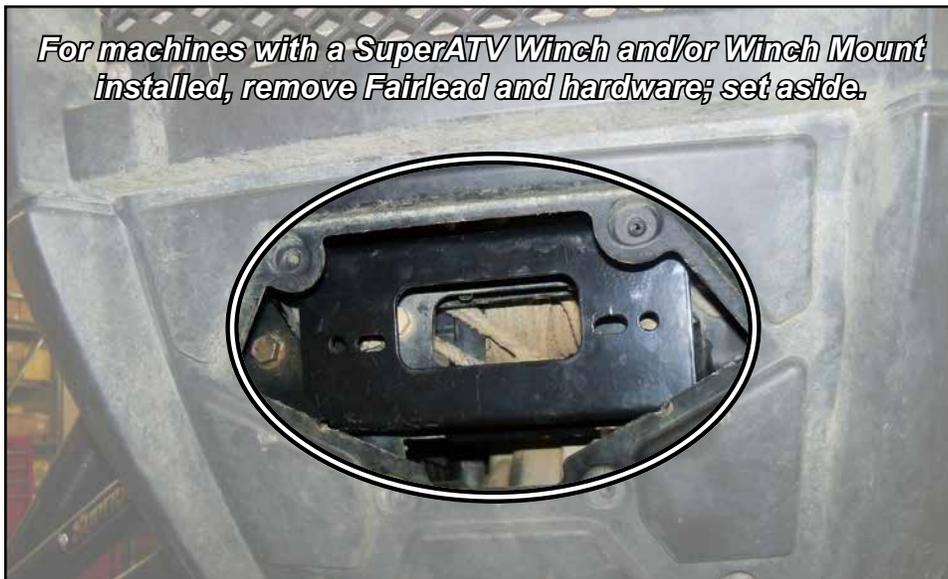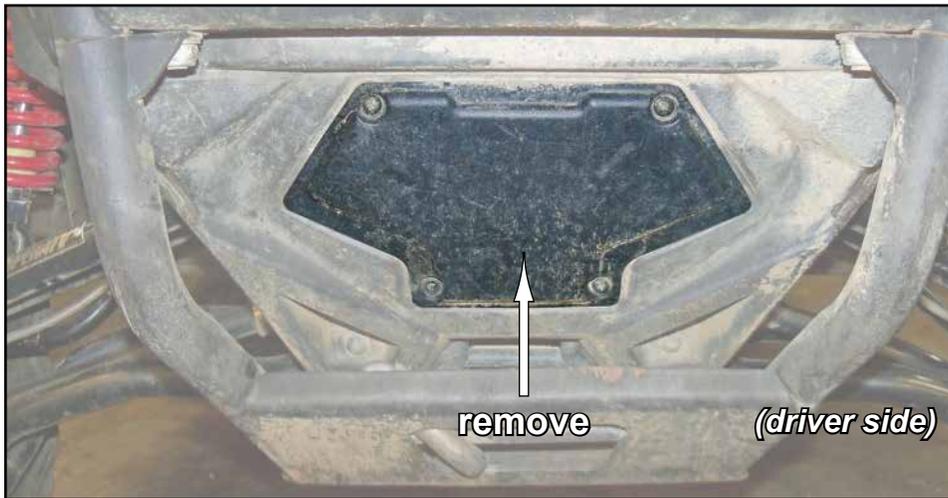

Installation performed on machine without a SuperATV Winch or installed.

Installation: *Tighten hardware completely at end of installation unless noted.*

1. Locate (2) holes underneath machine as shown in Fig. 1.

- Place (2) Nuts inside Frame as shown in Figs. 1a - 1b.

If machine has a SuperATV Winch and/or Winch Mount installed, go to Step 3

2. Install Winch Plate (H) to Frame with M8-1.25 x 20mm Lg. FHCS and M8-1.25 Nuts. See Figs. 2 - 2b.




See page 7 before continuing



3. Install Roller Brackets (C)(D) and Front Bar (B) to Mount Plate (A) with M10-1.50 x 30mm Lg. FHCS and M10-1.50 Nylock Nuts. See Fig. 3.

4. Install Roller (E) to Roller Brackets (C)(D) with M10-1.50 x 170mm Lg. FHCS and M10-1.50 Nut. See Fig. 4.

5. Install lower section of Mount Plate (A) to machine with M10-1.50 x 35mm Lg. FHCS. *Bolts thread into Nuts installed in Step 1.* See Figs. 5 - 5a.

- Install upper section of Mount Plate (A) and users Fairlead to Winch Plate (H) with M8-1.25 x 30mm Lg. SHCS and M8-1.25 Nuts. See Figs. 6 - 6a.

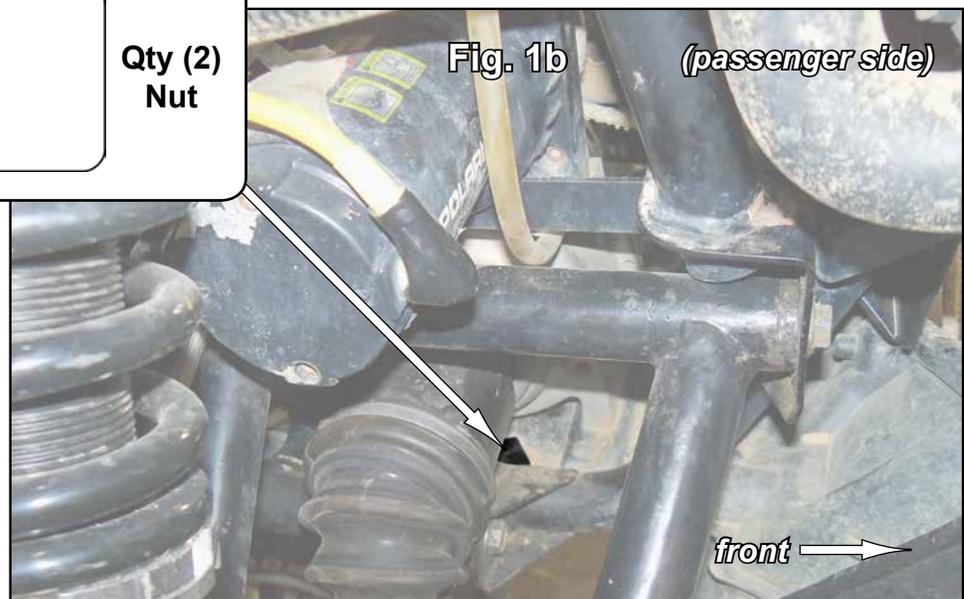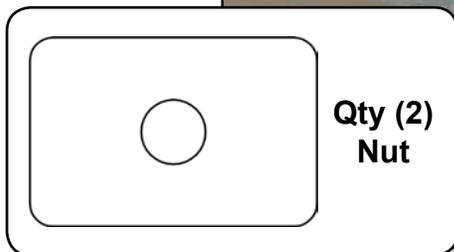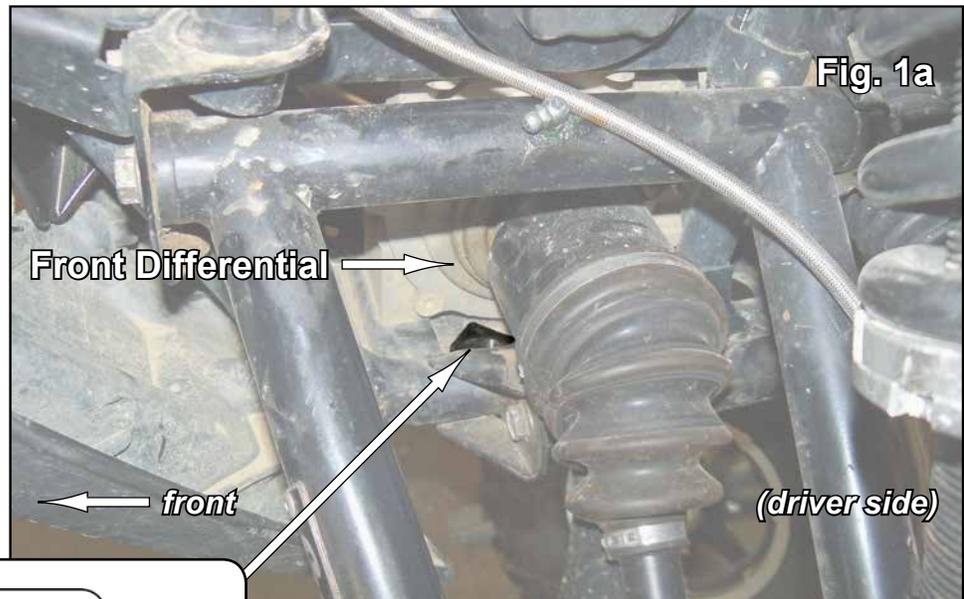

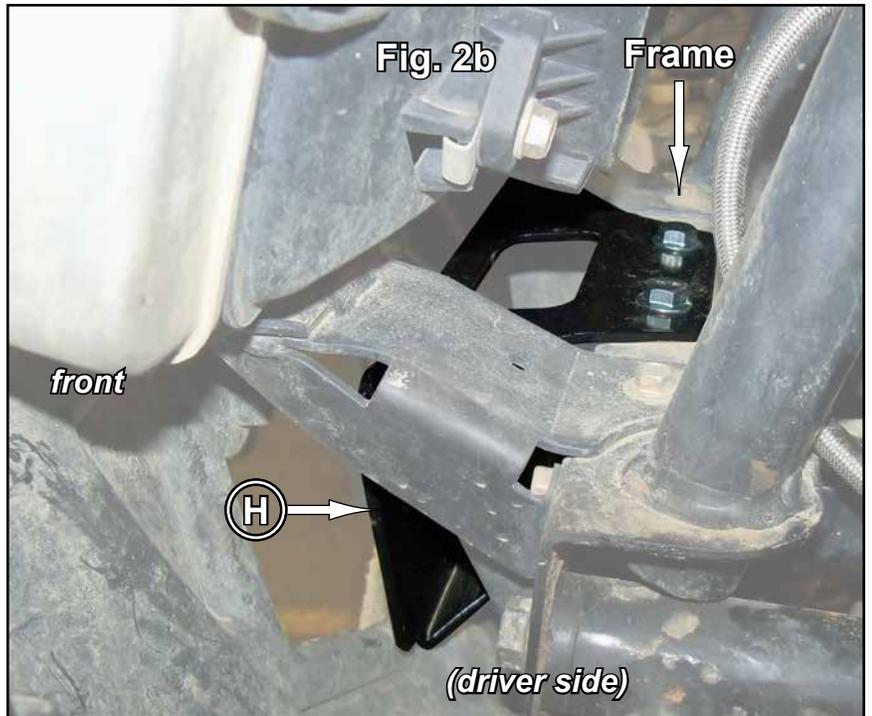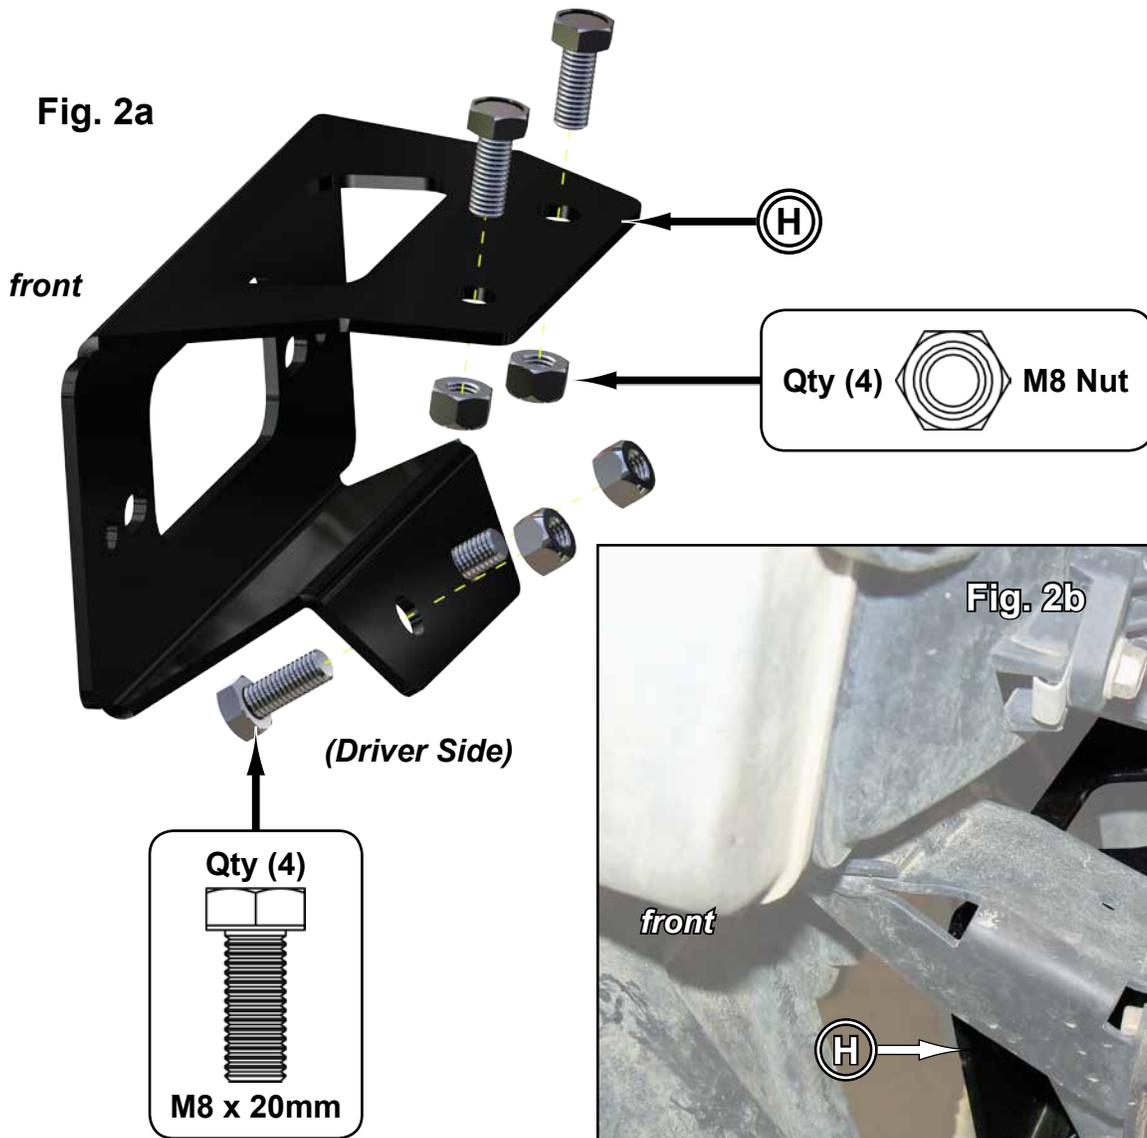

SuperATV strongly recommends installing Roller (E)



Roller (E) installation options:

If machine is equipped with Roller setup, or if installer chooses not to install provided Roller, install Pull Bar (B) as shown.

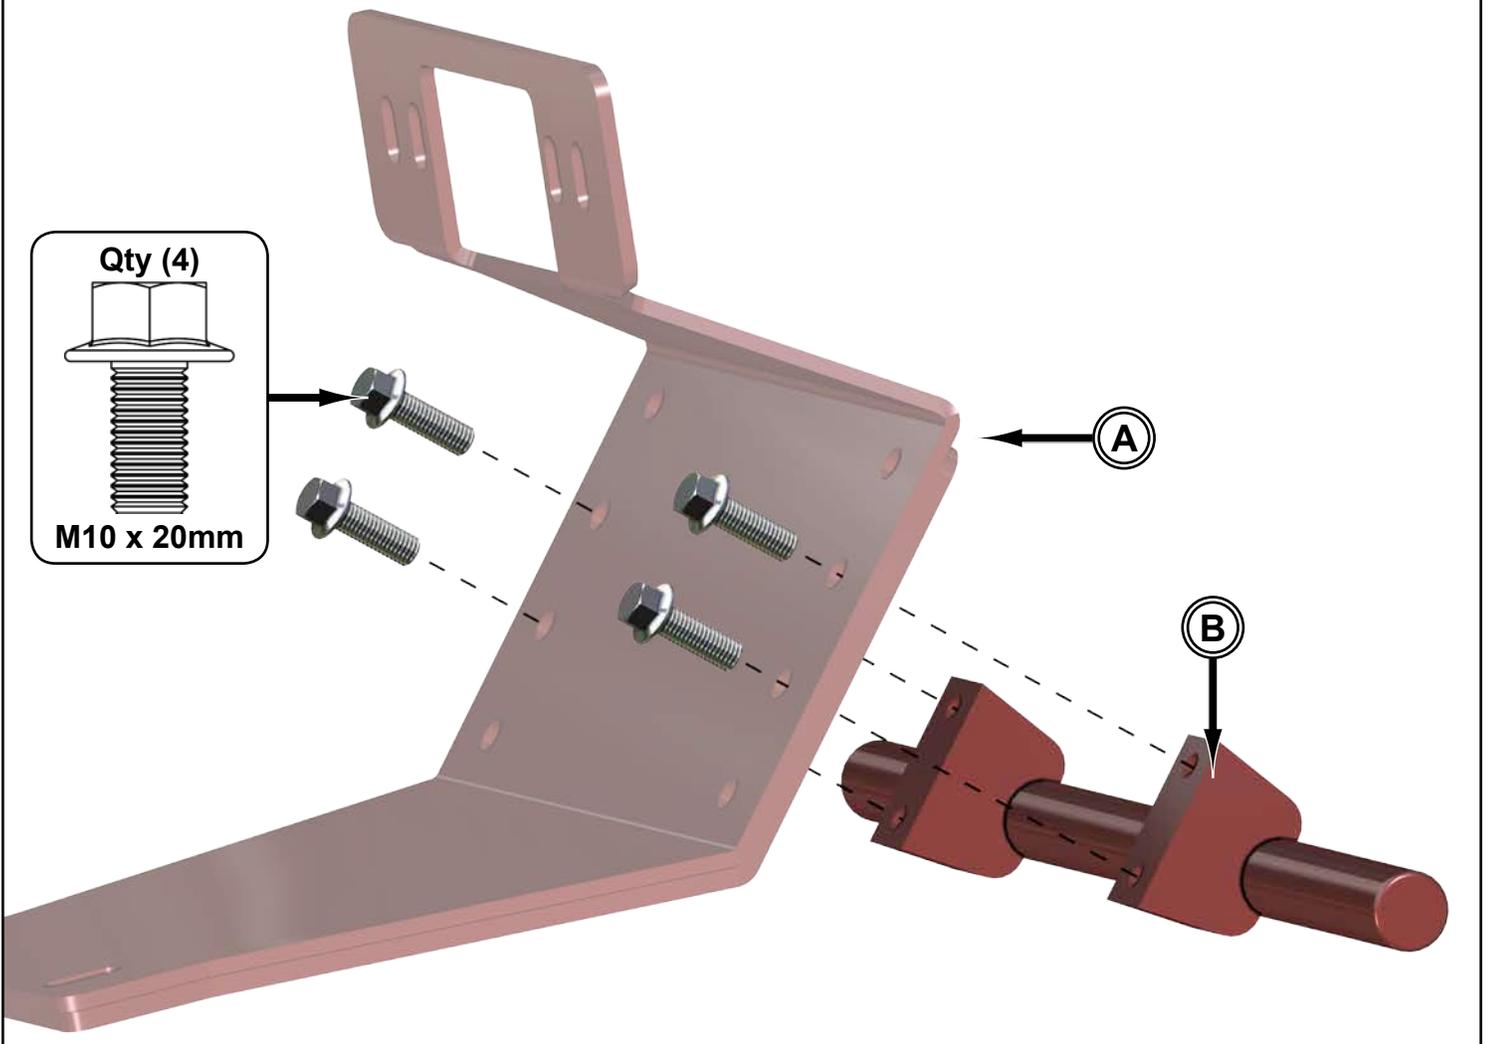


Fig. 3

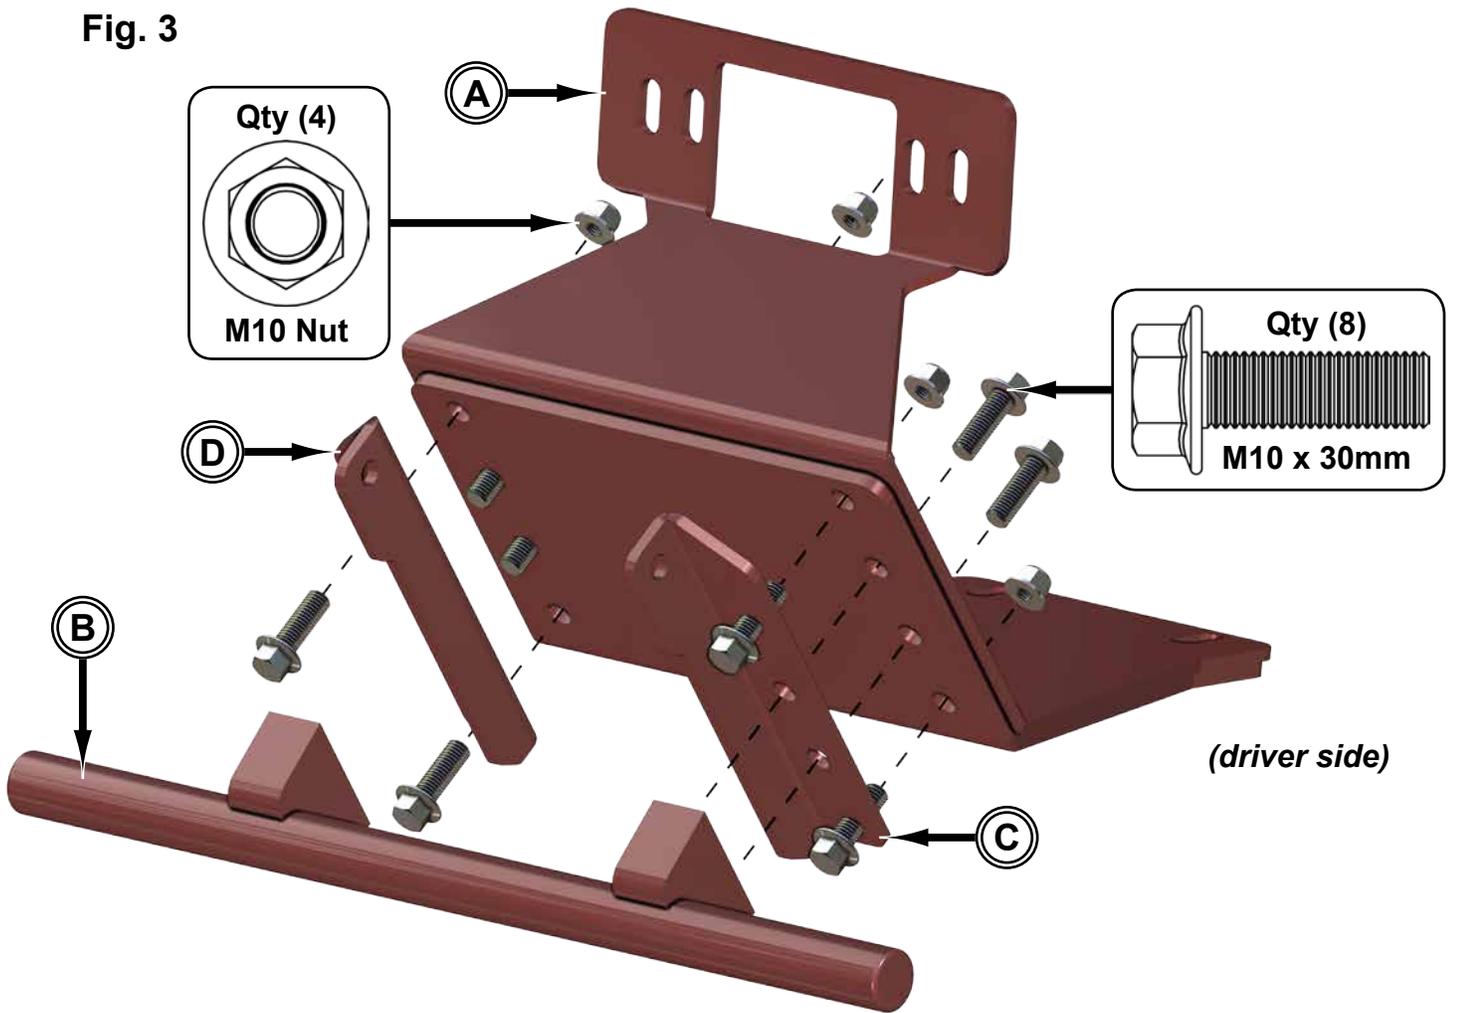
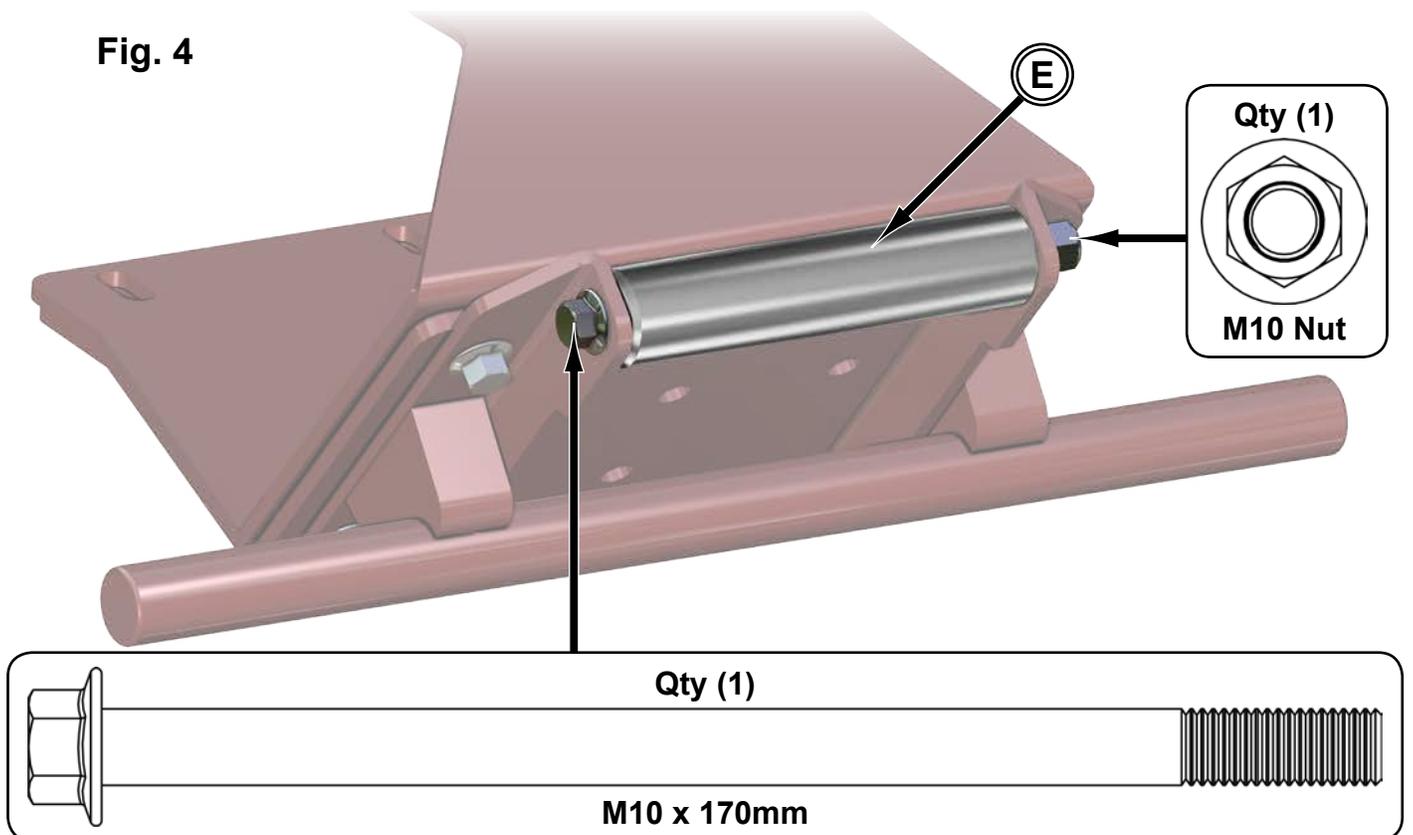


Fig. 4






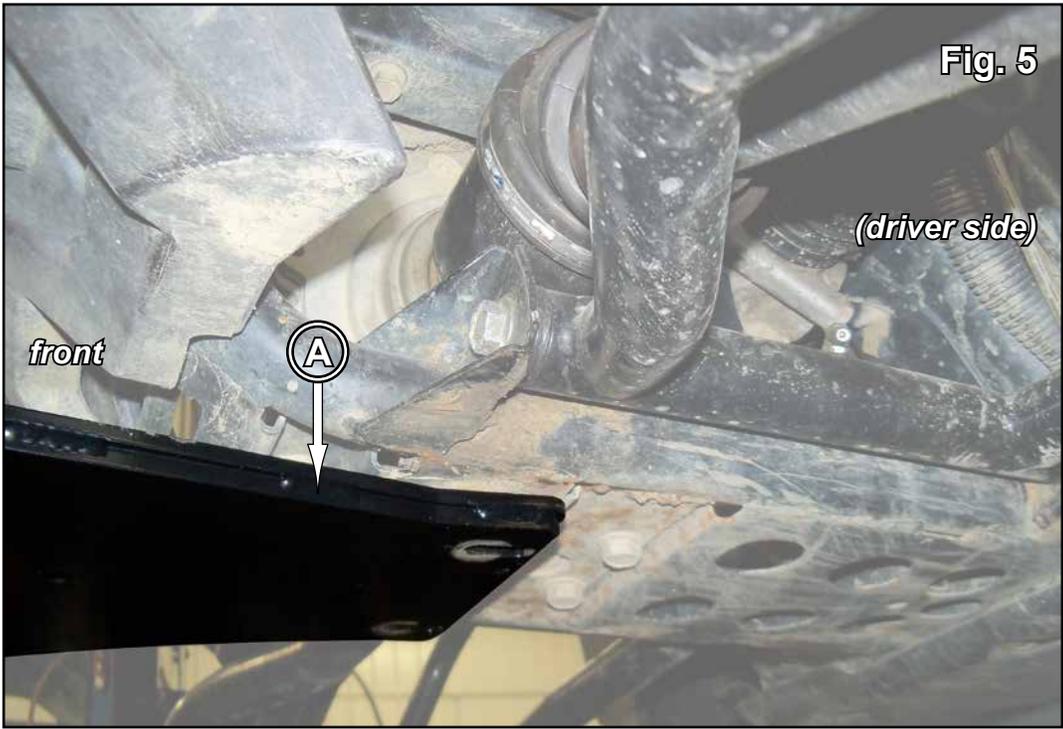



Fig. 5a

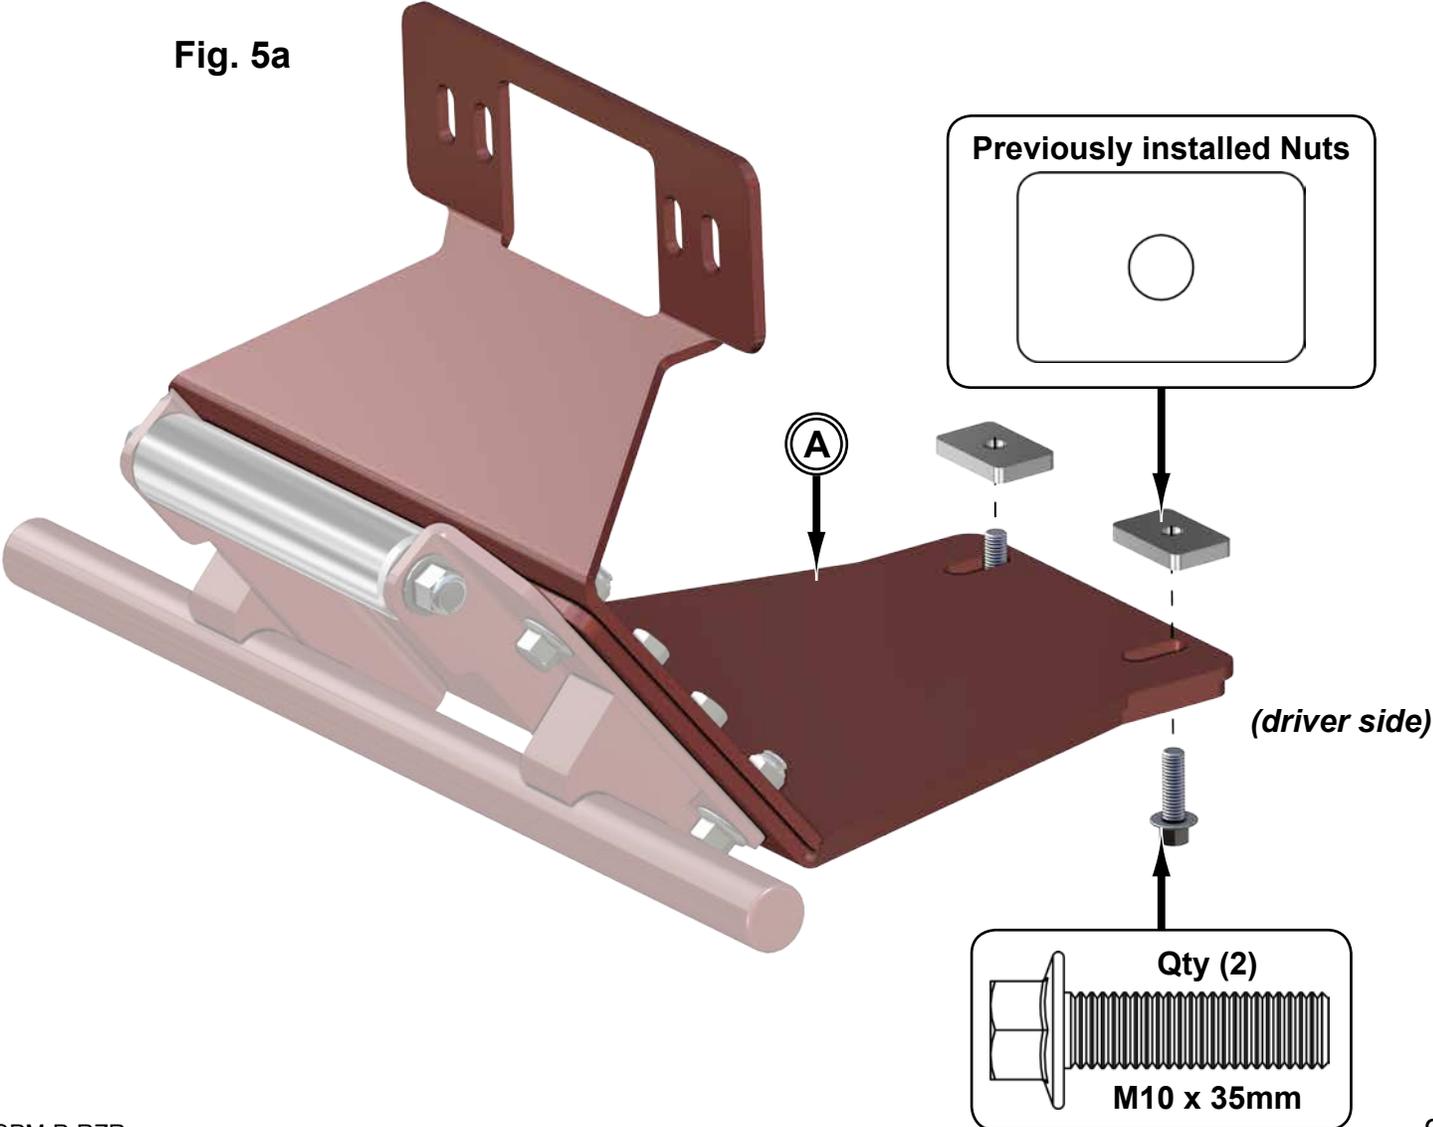

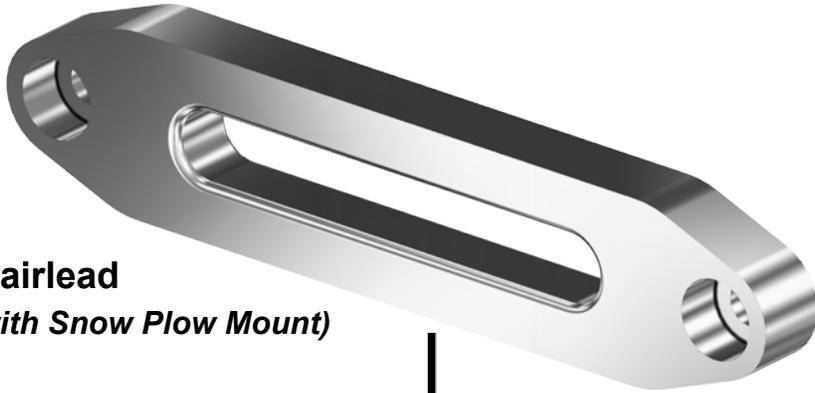

Fairlead
(not included with Snow Plow Mount)

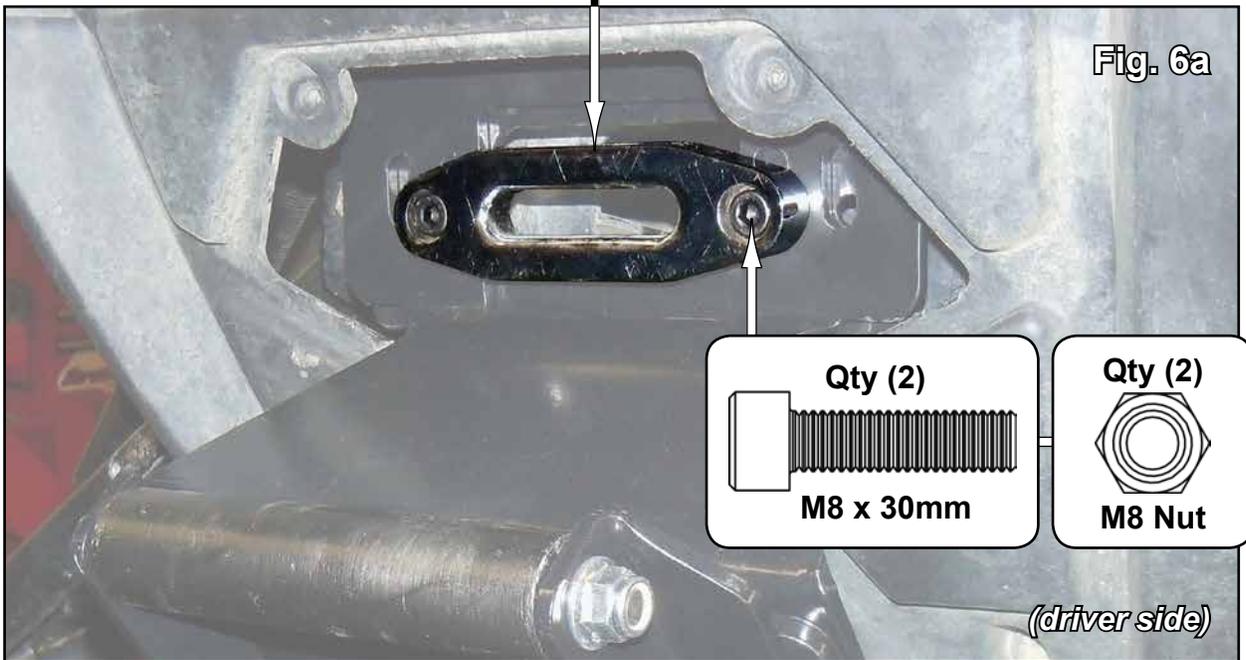

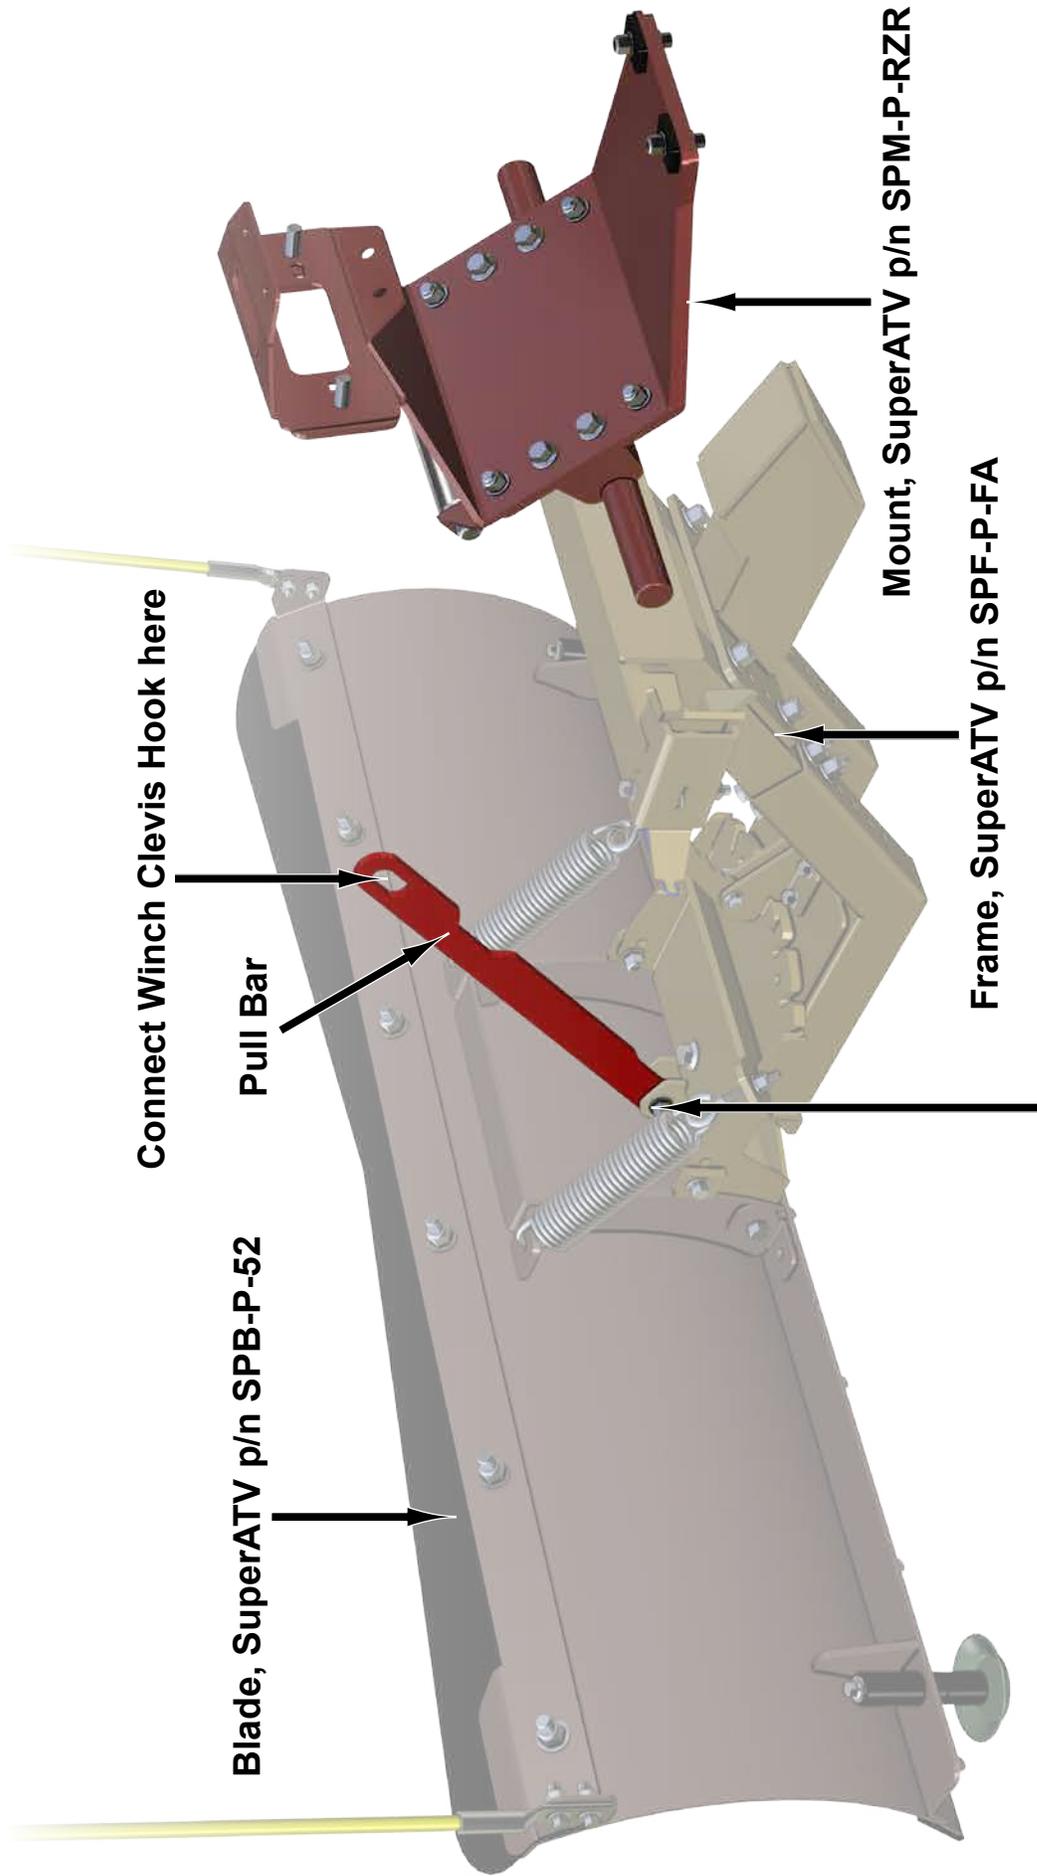

Connect Winch Clevis Hook here

Blade, SuperATV p/n SPB-P-52

Pull Bar

Mount, SuperATV p/n SPM-P-RZR


Frame, SuperATV p/n SPF-P-FA

Install Pull Bar, included with Mount, to Blade.
M10 Hardware included with Frame.

INSTALLATION INSTRUCTIONS

UTV Snow Plow Frame

Item	Description
A	Adjustment Plate
B	Top Plate
C	Upper Section
D	Back Stop
E	Spacer Plate

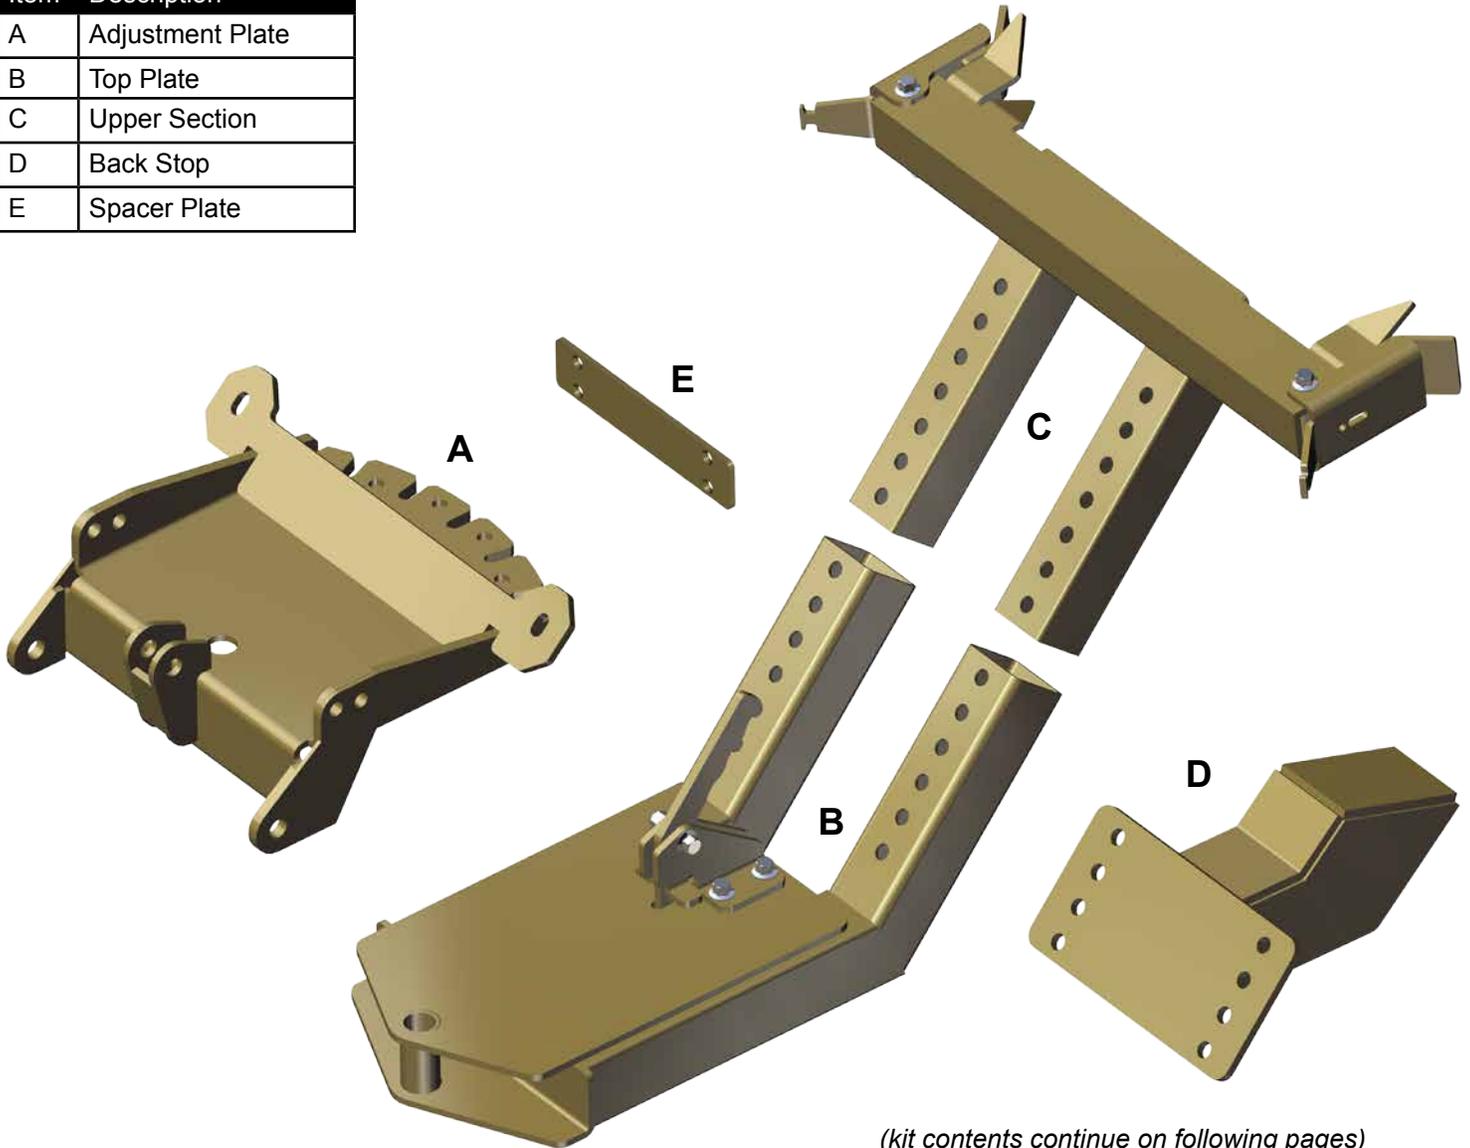

(kit contents continue on following pages)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You

For Choosing












Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.


Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

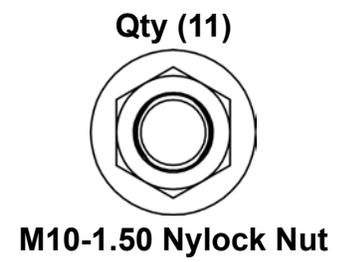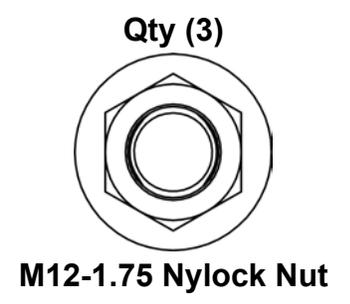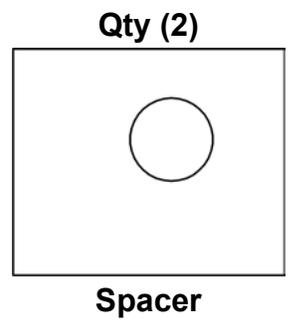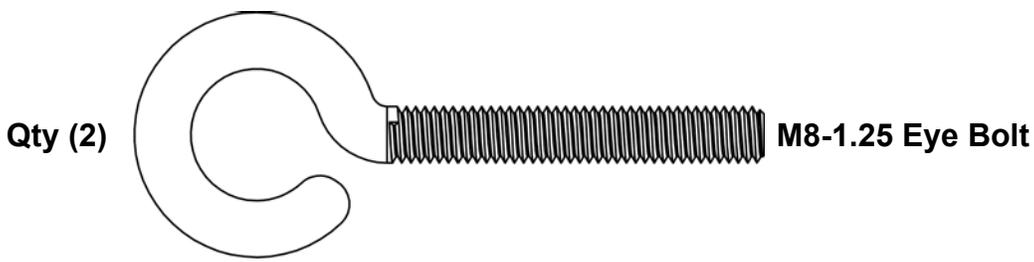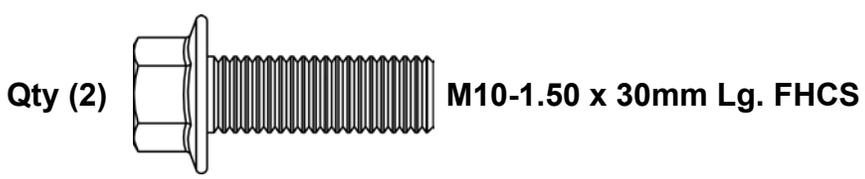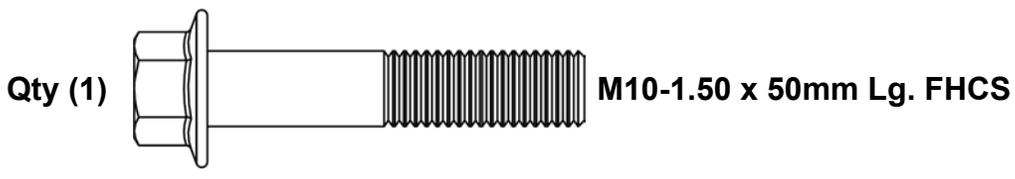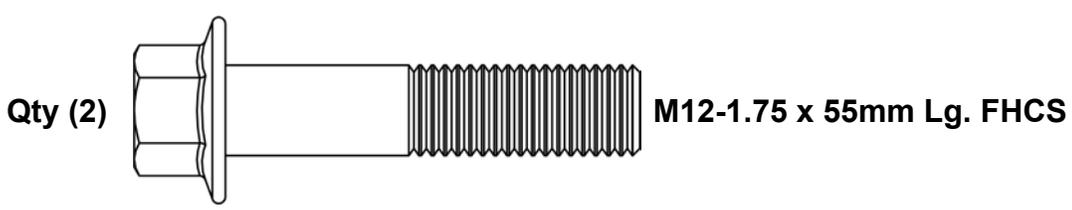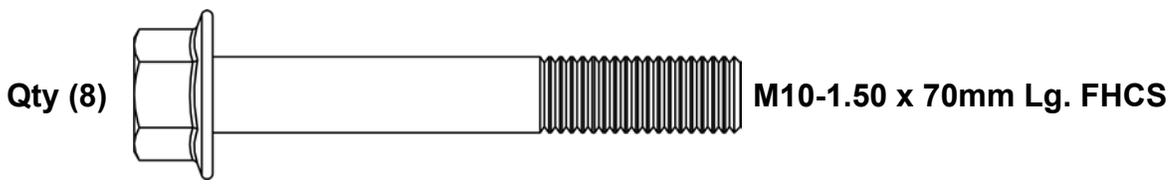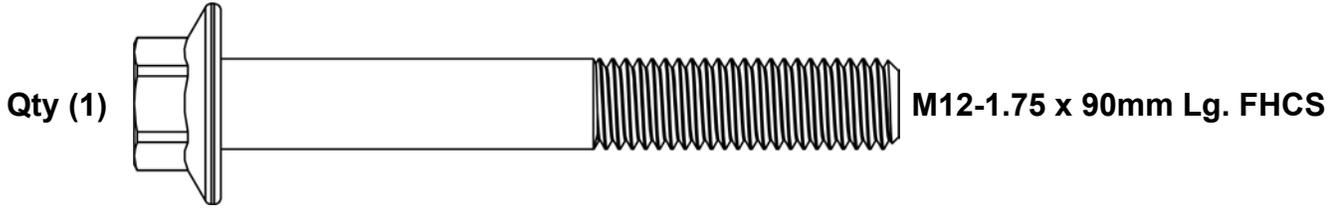

Qty (2)

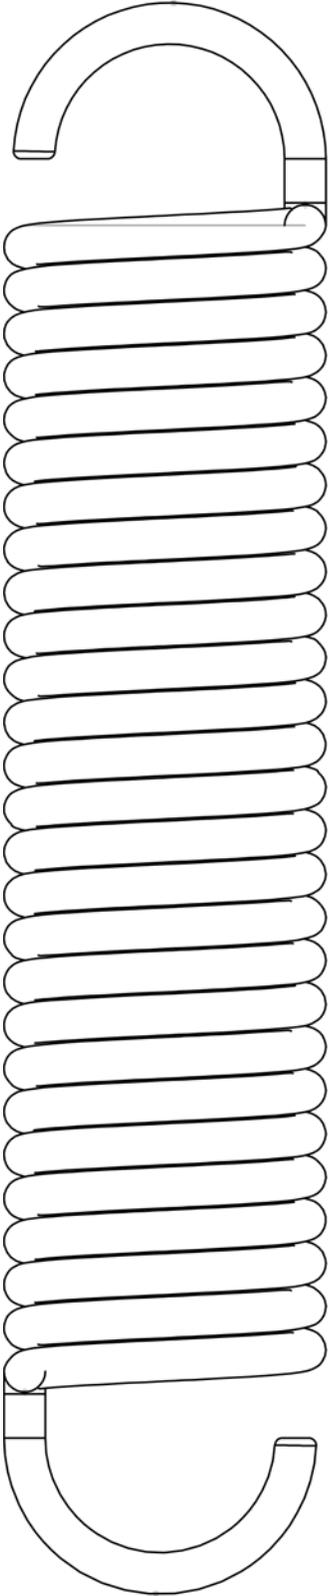


(L) Plow Spring

Qty (1)



Sleeve

Reference only; do not assemble at this time.

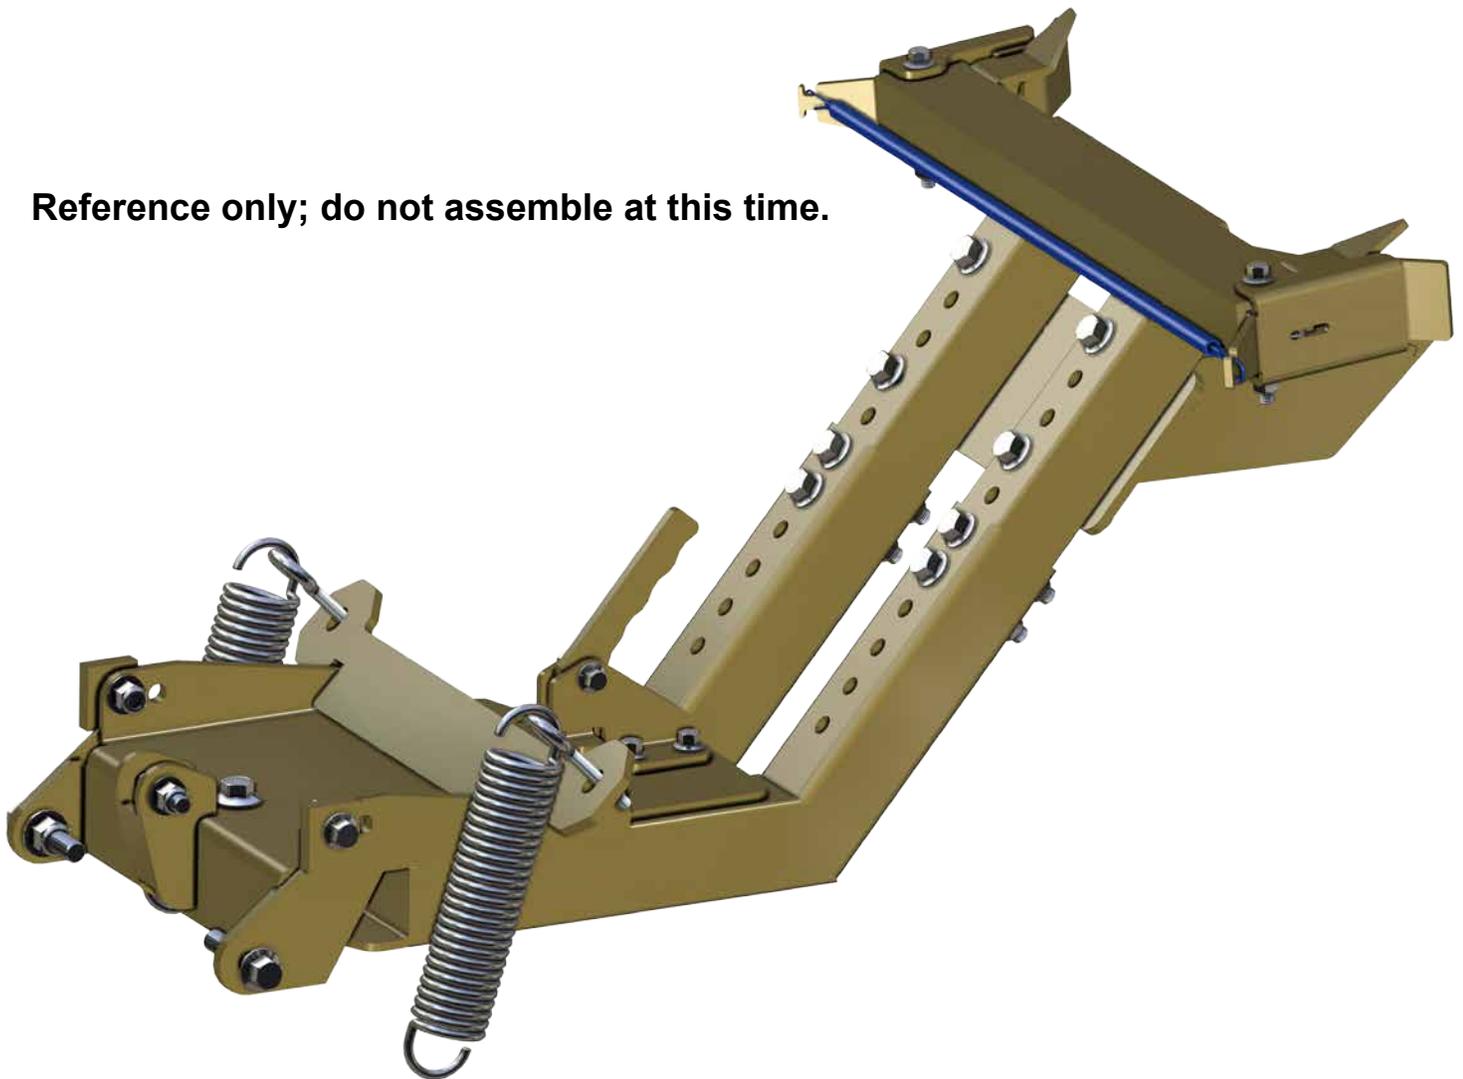

Installation: *Do not tighten hardware completely unless noted.*

1. Place Adjustment Plate (A) onto Top Plate (B). See Fig. 1.
 - Insert Sleeve and secure components with M12-1.75 x 90mm Lg. FHCS and M12-1.75 Nylock Nut.
2. Insert Upper Section (C) into Top Plate (B) and secure with M10-1.50 x 70mm Lg. FHCS and M10-1.50 Nylock Nuts. See Fig. 2.
 - *Spacer Plate (E) installation is optional. See Fig. 2.*
 - **All machines are different and spacing may vary.**
3. Refer to Fig. 3 and install following items to Adjustment Plate (A):
 - Plow Springs (L)
 - M8 Eye Bolts and M8-1.25 Nylock Nuts
 - Spacers, M10-1.50 x 30mm Lg. FHCS, and M10-1.50 Nylock Nuts
 - M10-1.50 x 50mm Lg. FHCS and M10-1.50 Nylock Nut (secures Pull Bar included with Plow Mount)
 - M12-1.75 x 55mm Lg. FHCS and M12-1.75 Nylock Nuts (secures Plow to Plow Frame)
4. Install Back Stop (D) to Upper Section (C) with M10-1.50 x 70mm Lg. FHCS and M10-1.50 Nylock Nuts. See Fig. 4.
 - **All machines are different and spacing may vary.**

Fig. 1

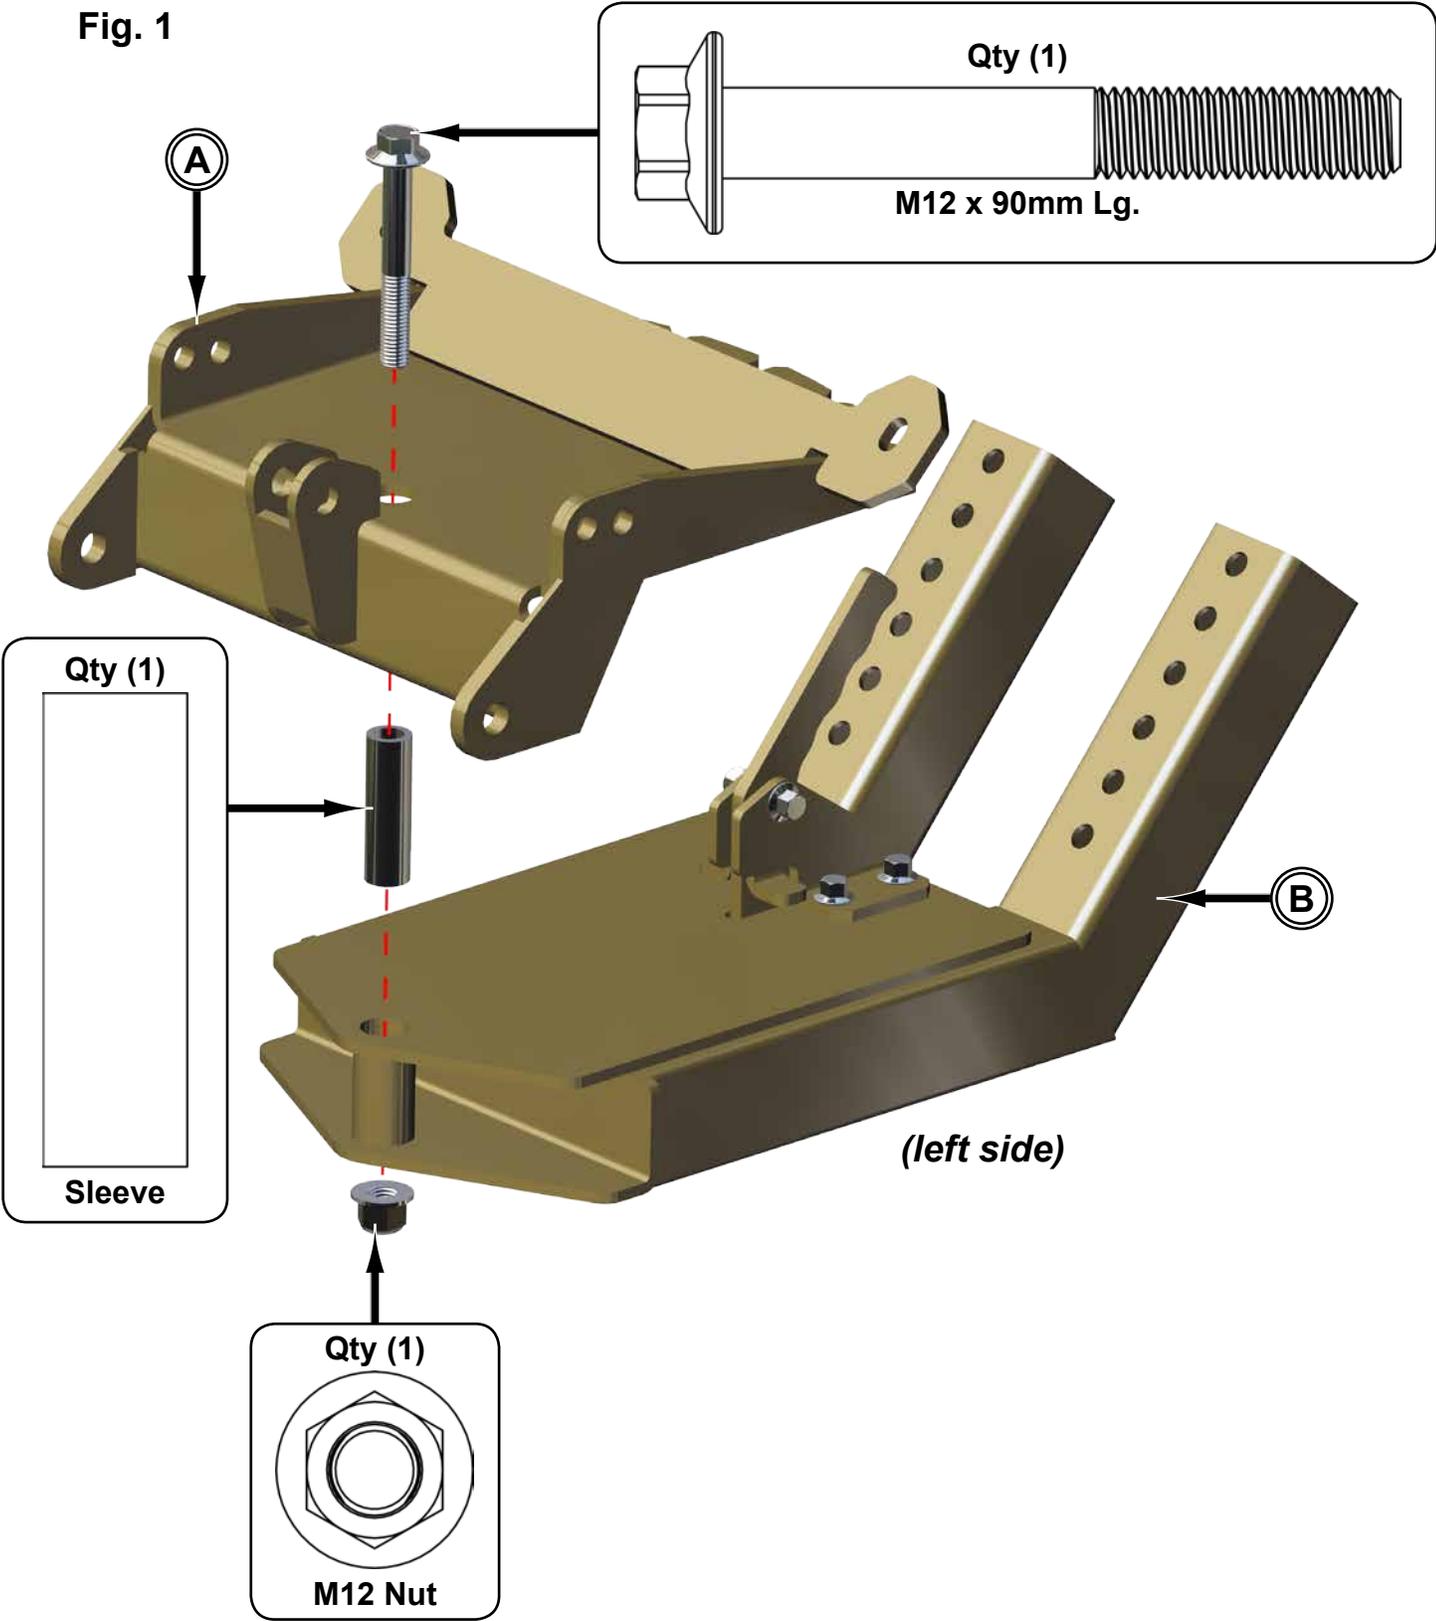


Fig. 2

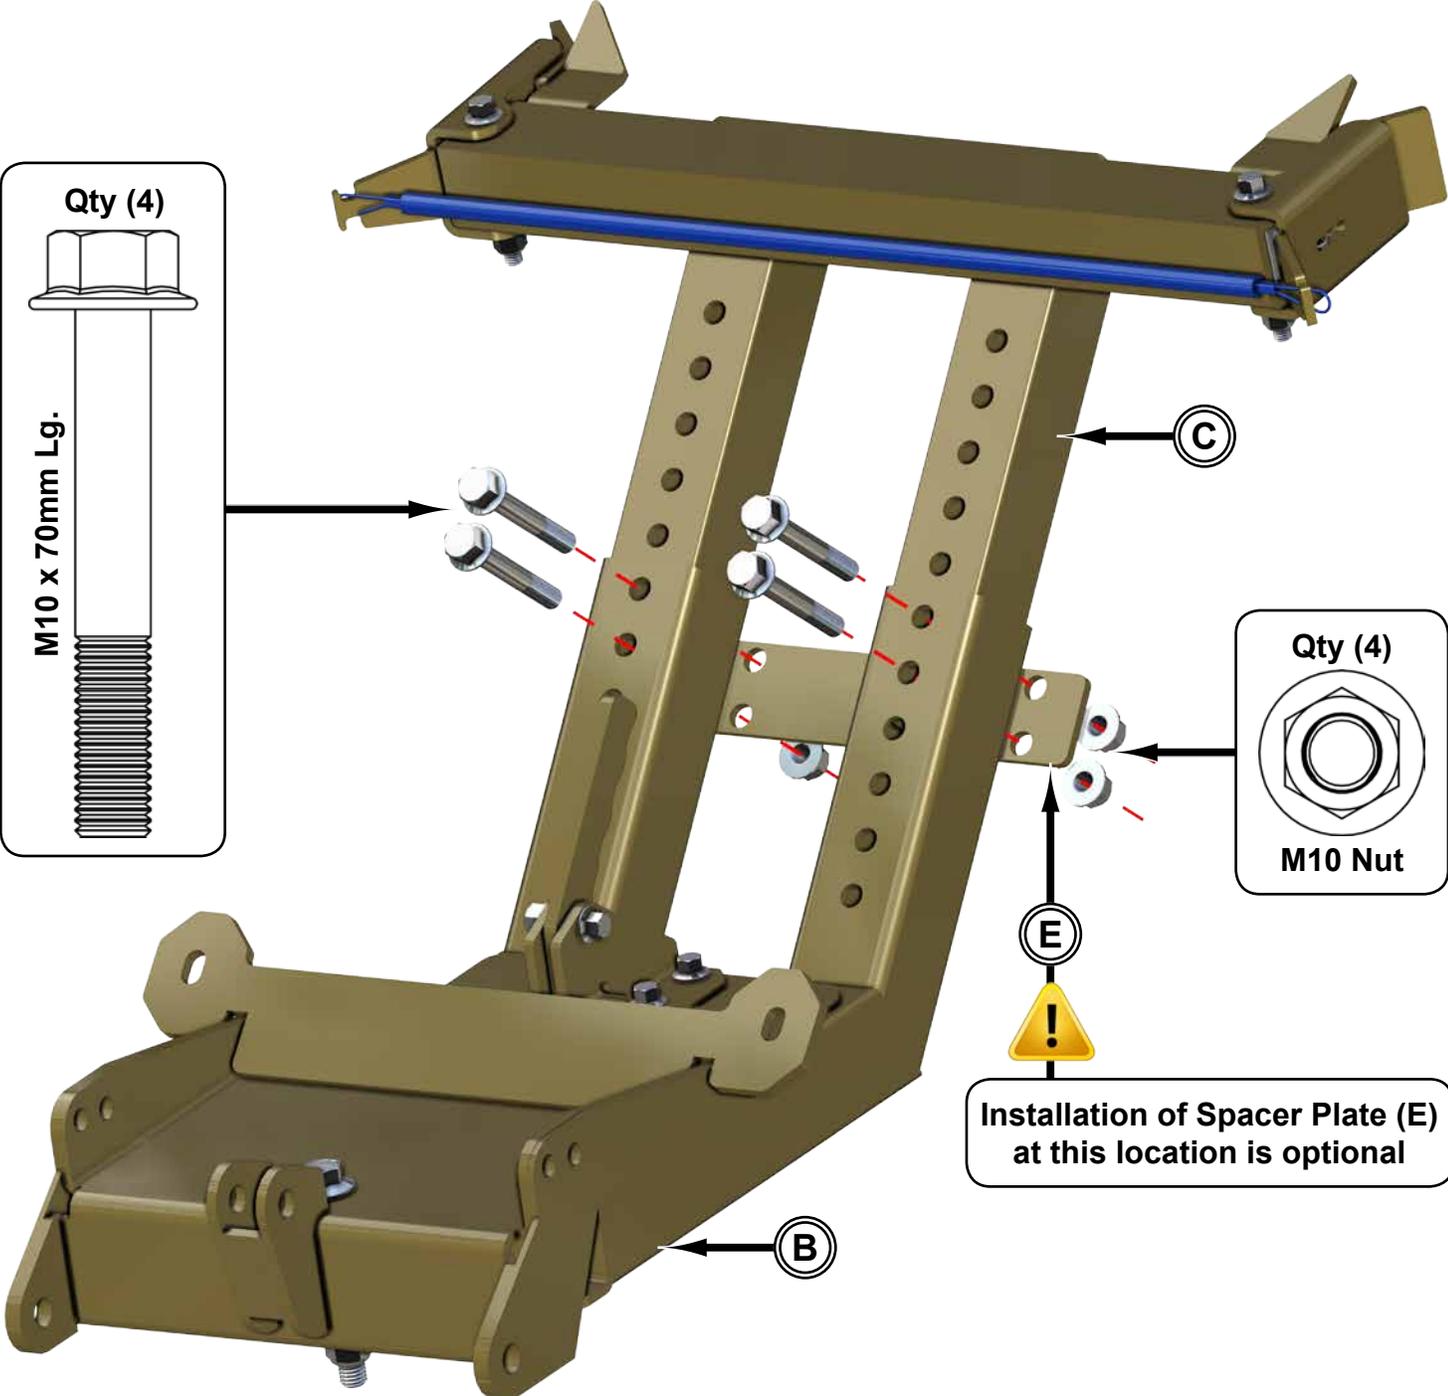


Fig. 3




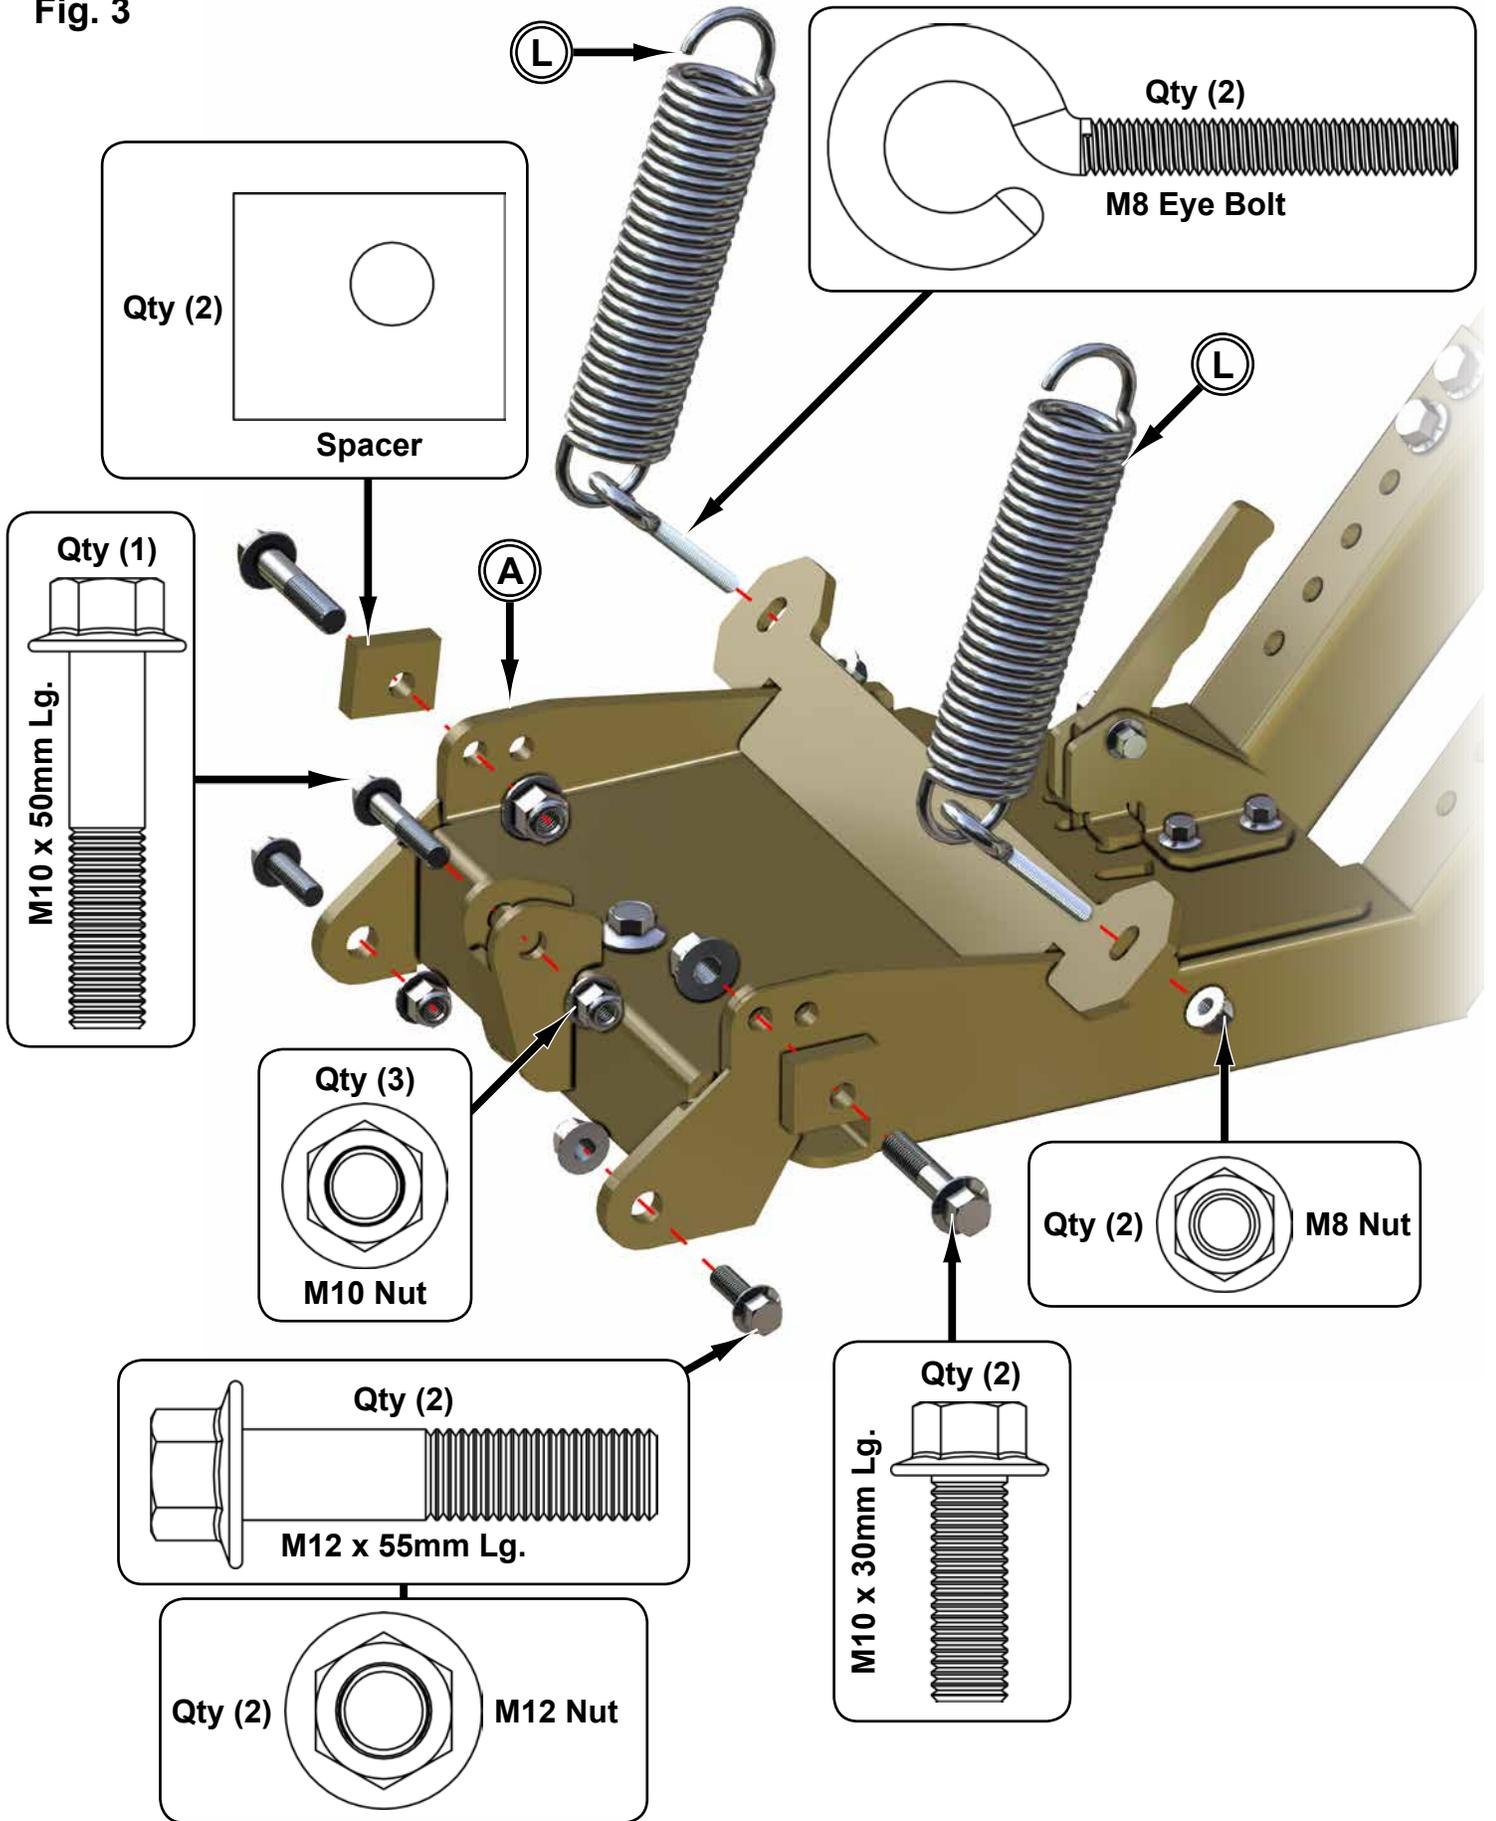


Fig. 4

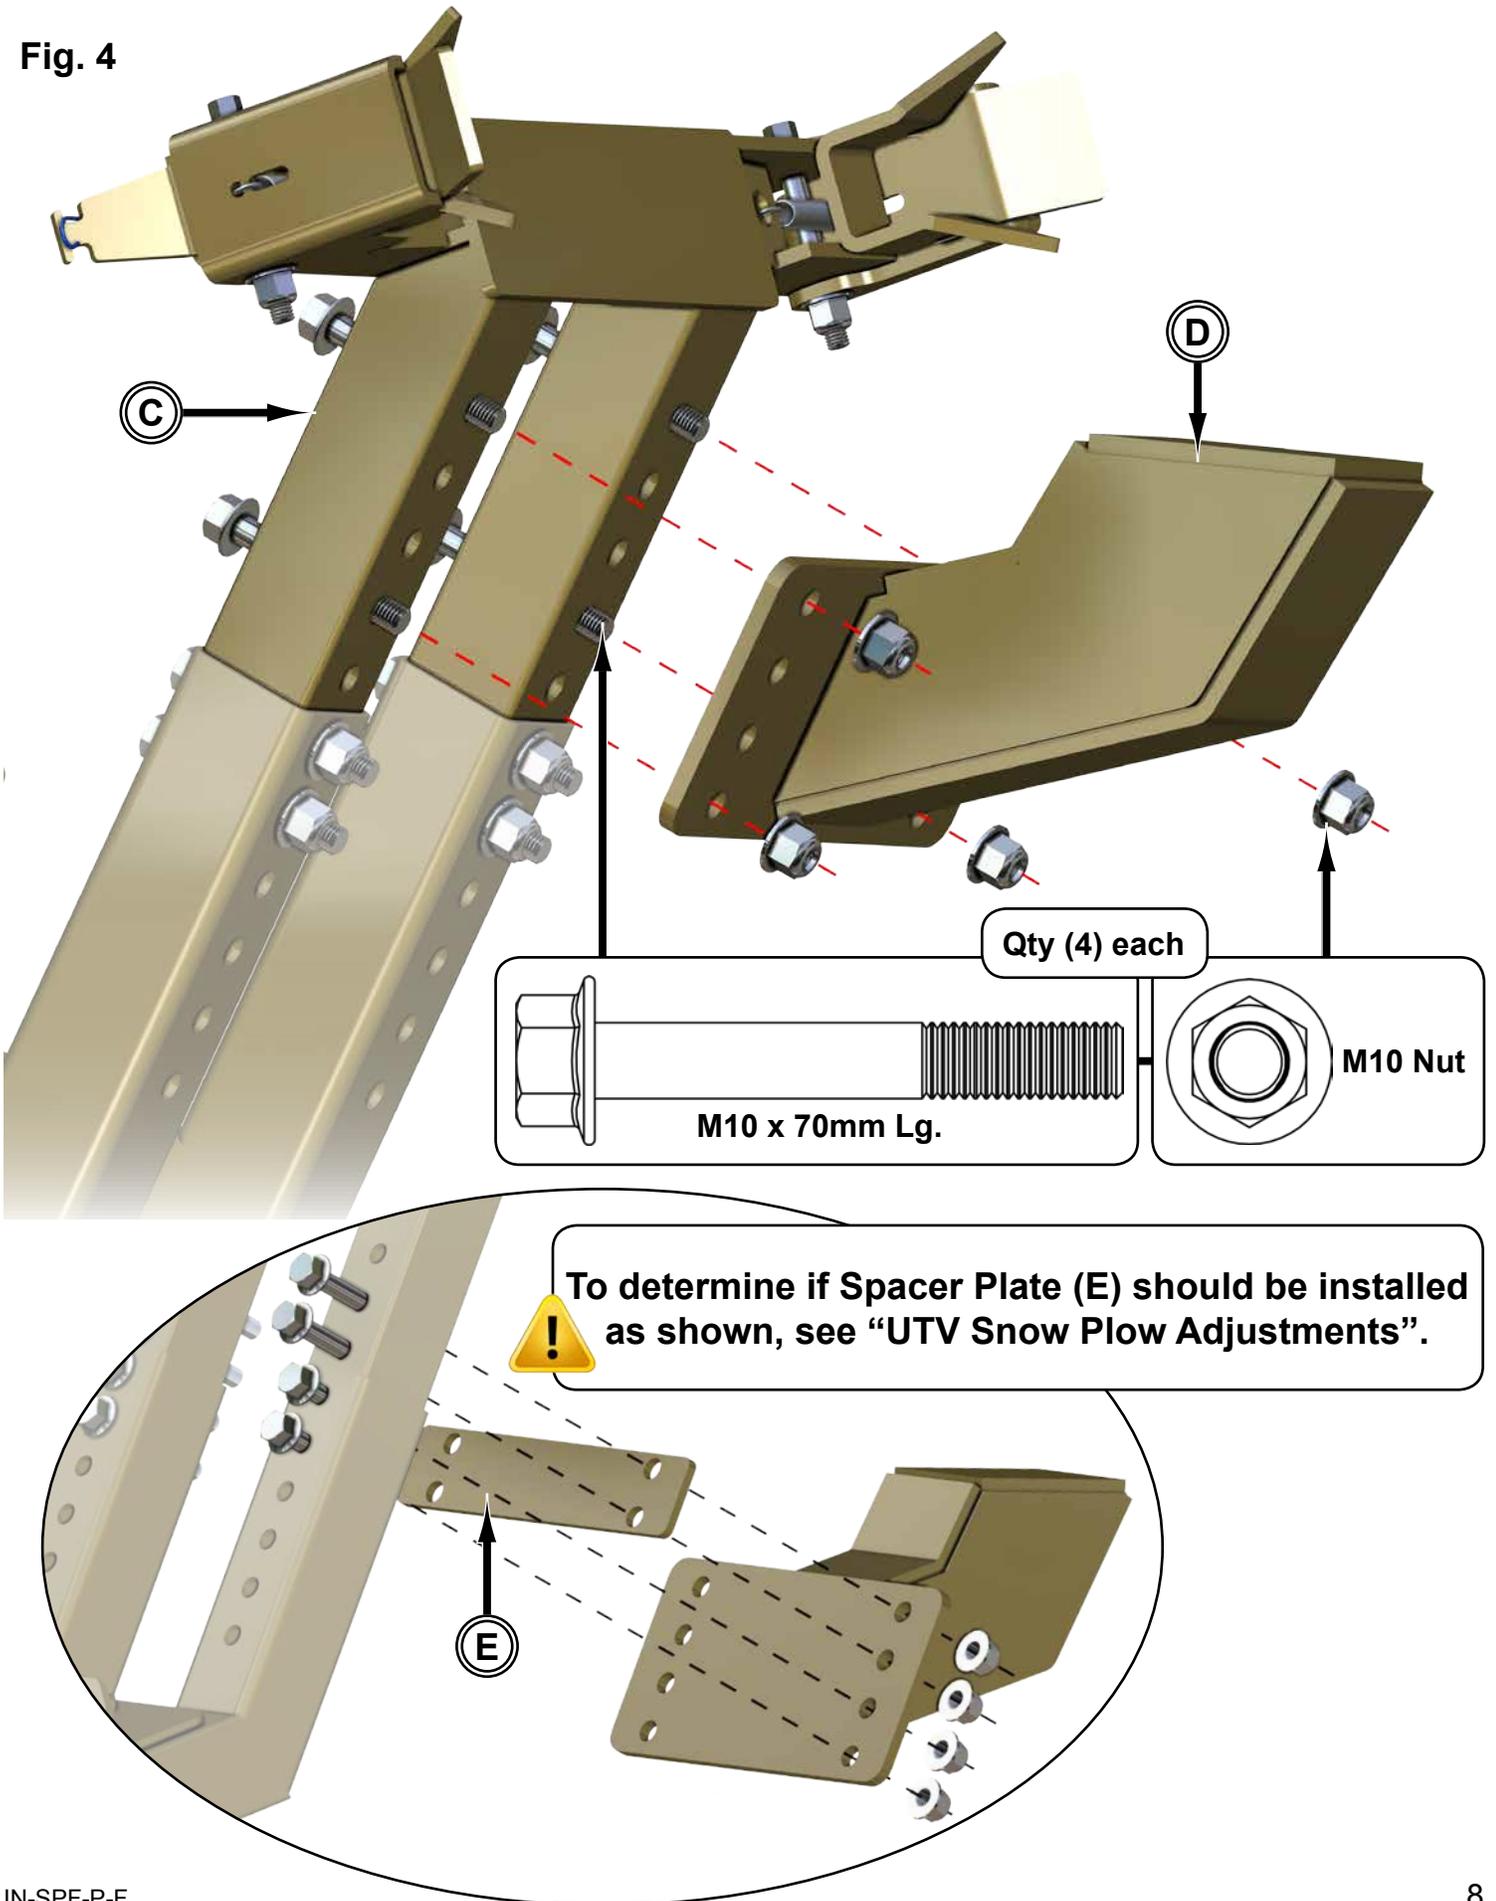

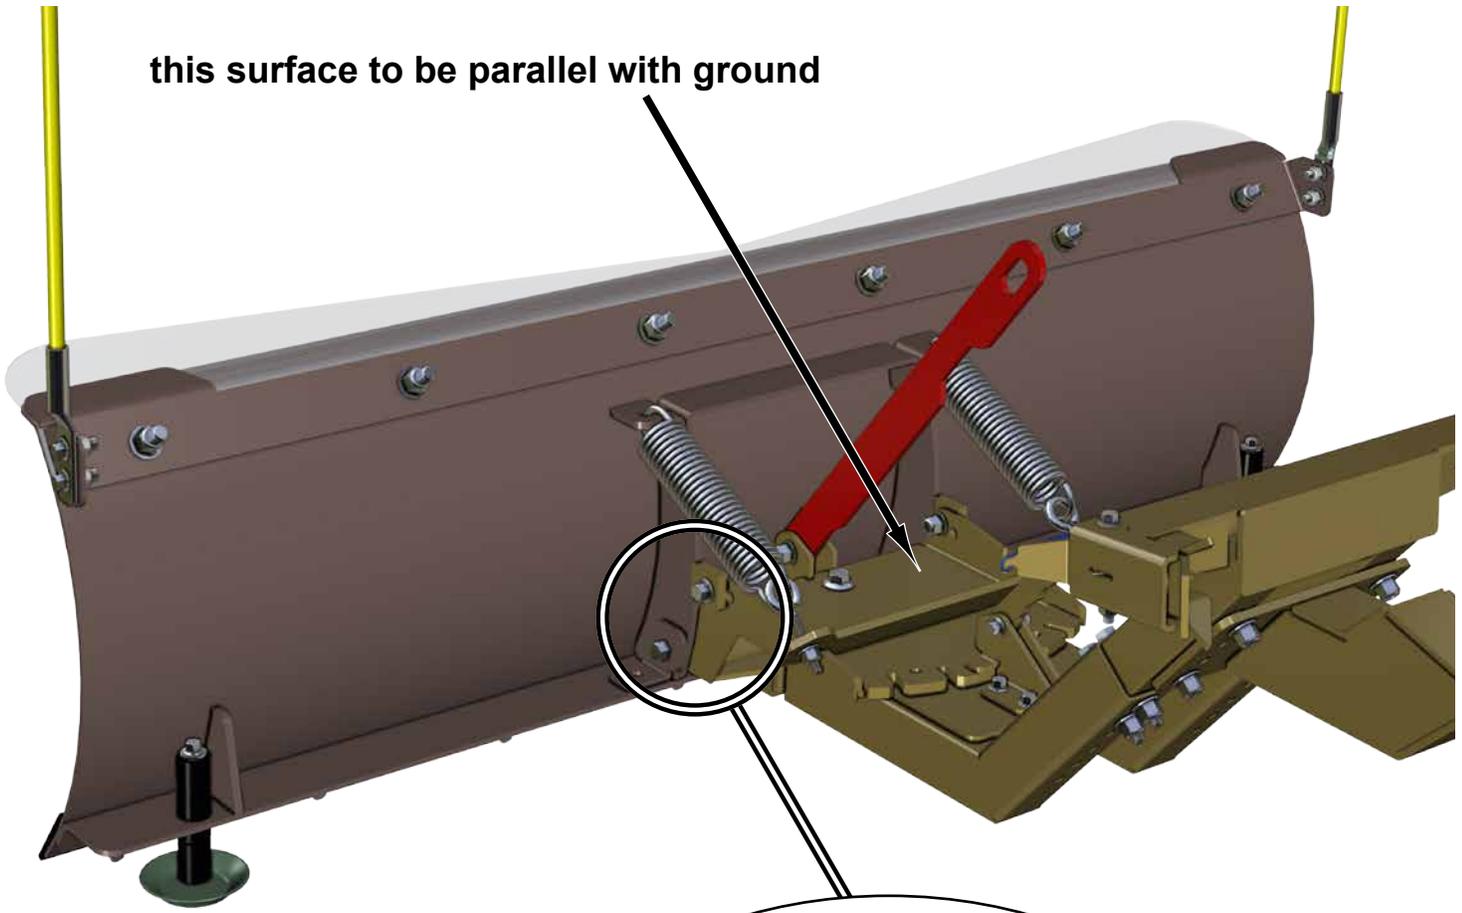


this surface to be parallel with ground

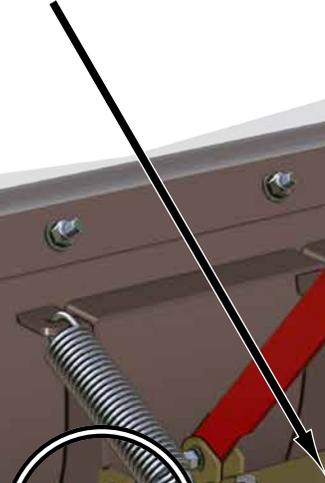

 Blade should be 90° or slightly forward for proper break-over function



Spacers can be rotated to offer more adjustability.

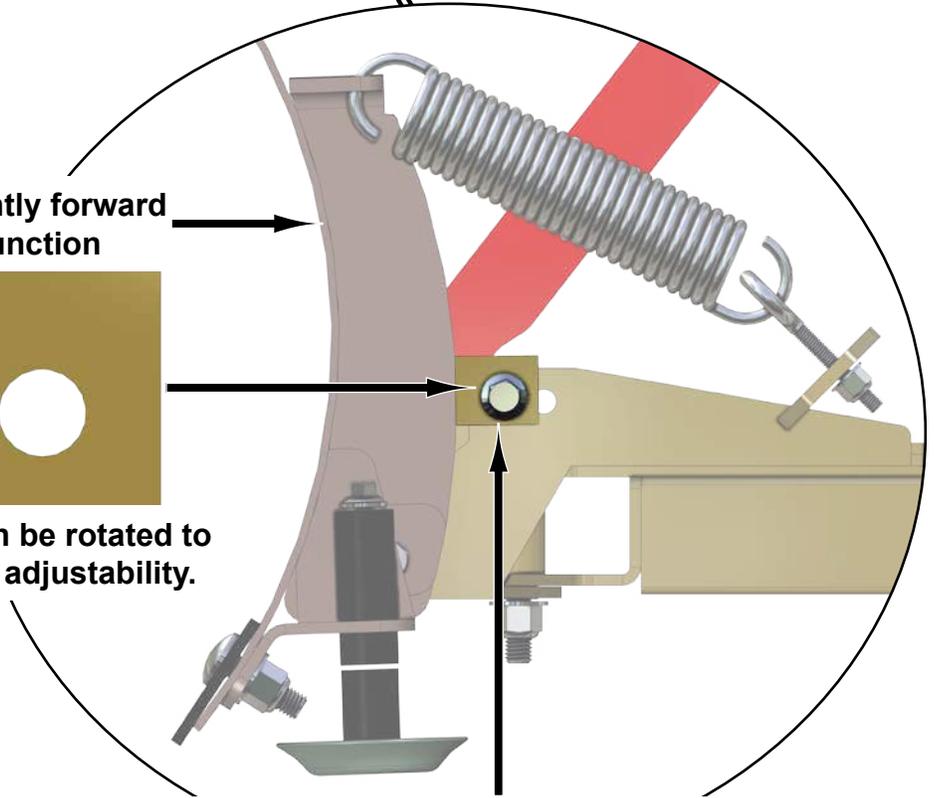


- Spacers in foremost hole will tilt Blade forward or vertical.
- Moving Spacers to rearmost hole will tilt Blade backward.

INSTALLATION INSTRUCTIONS

Snow Plow Blade

Item	Description	Qty
A	Blade	1
B	Skid Pads (pre-assembled)	2
C	Marker Tubes	2
D	Deflector	1
E	Top Plate (pre-assembled)	1

(52" Blade shown)

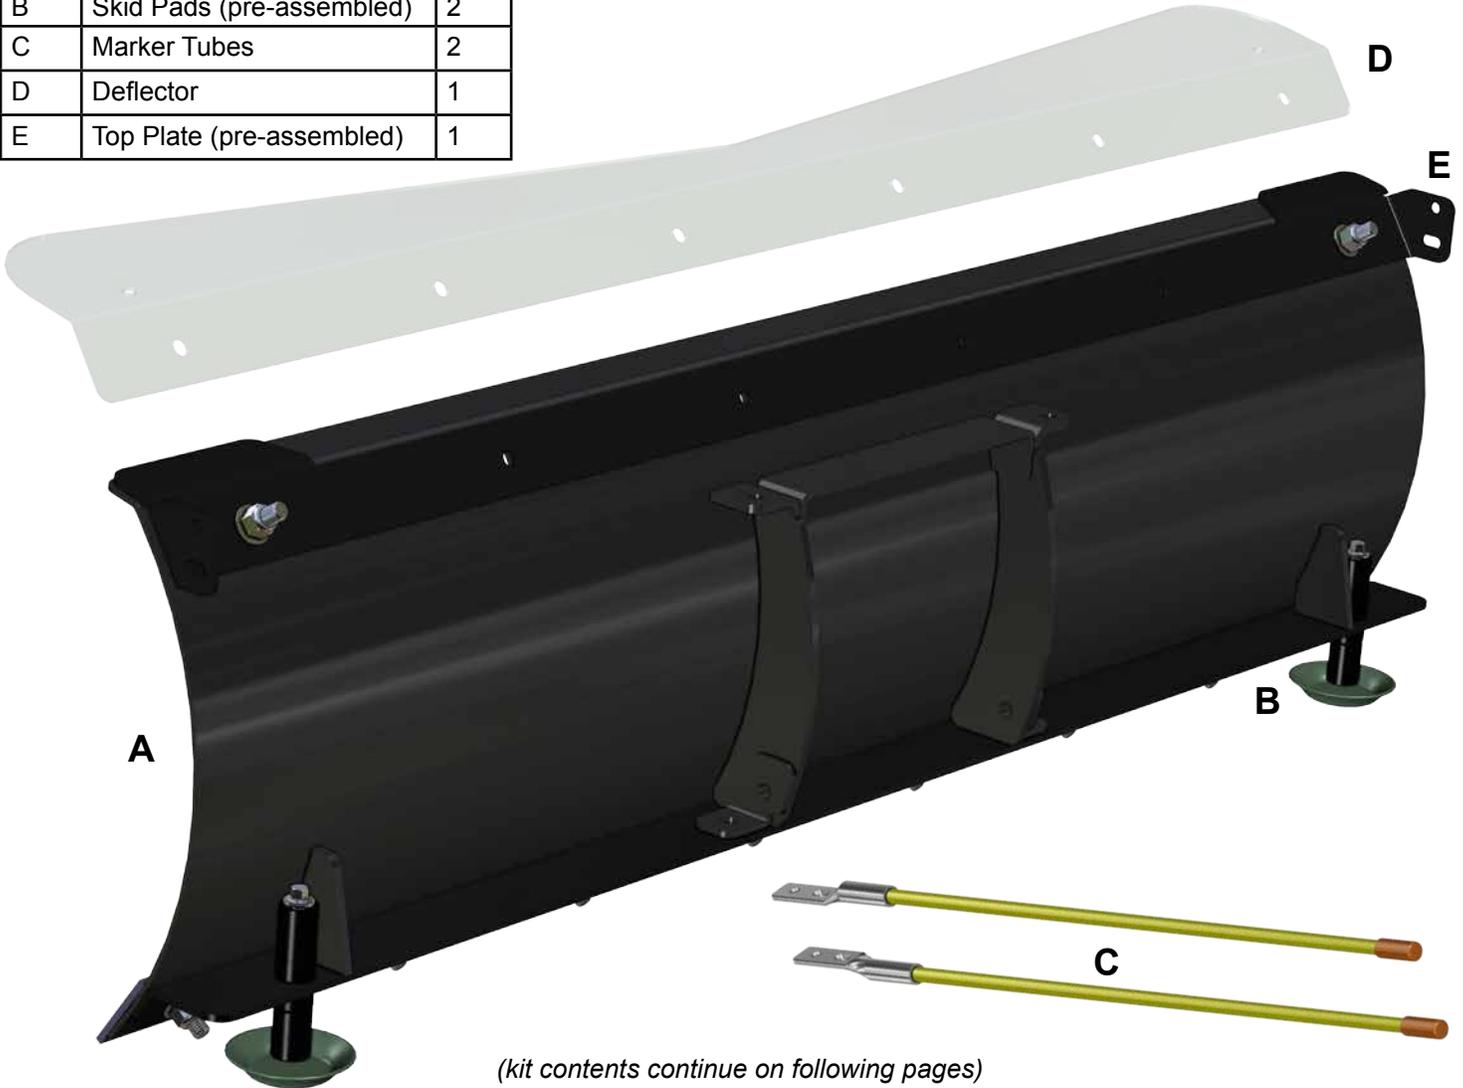

(kit contents continue on following pages)

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You

For Choosing



Liability Statement



SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.


SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warranted if item was not installed properly, misused, or modified.

(kit contents continued)

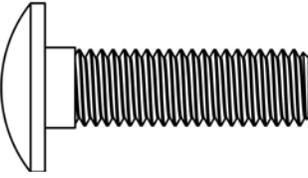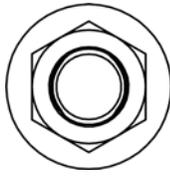Blade Size	Hardware	Qty	
52"	 M10-1.50 x 35mm Lg. CHCS	 M10-1.50 Nylock Nut	6
60"			7
72"			8



Top Plate (E) is pre-assembled to Blade (A).
Remove hardware and set items aside.

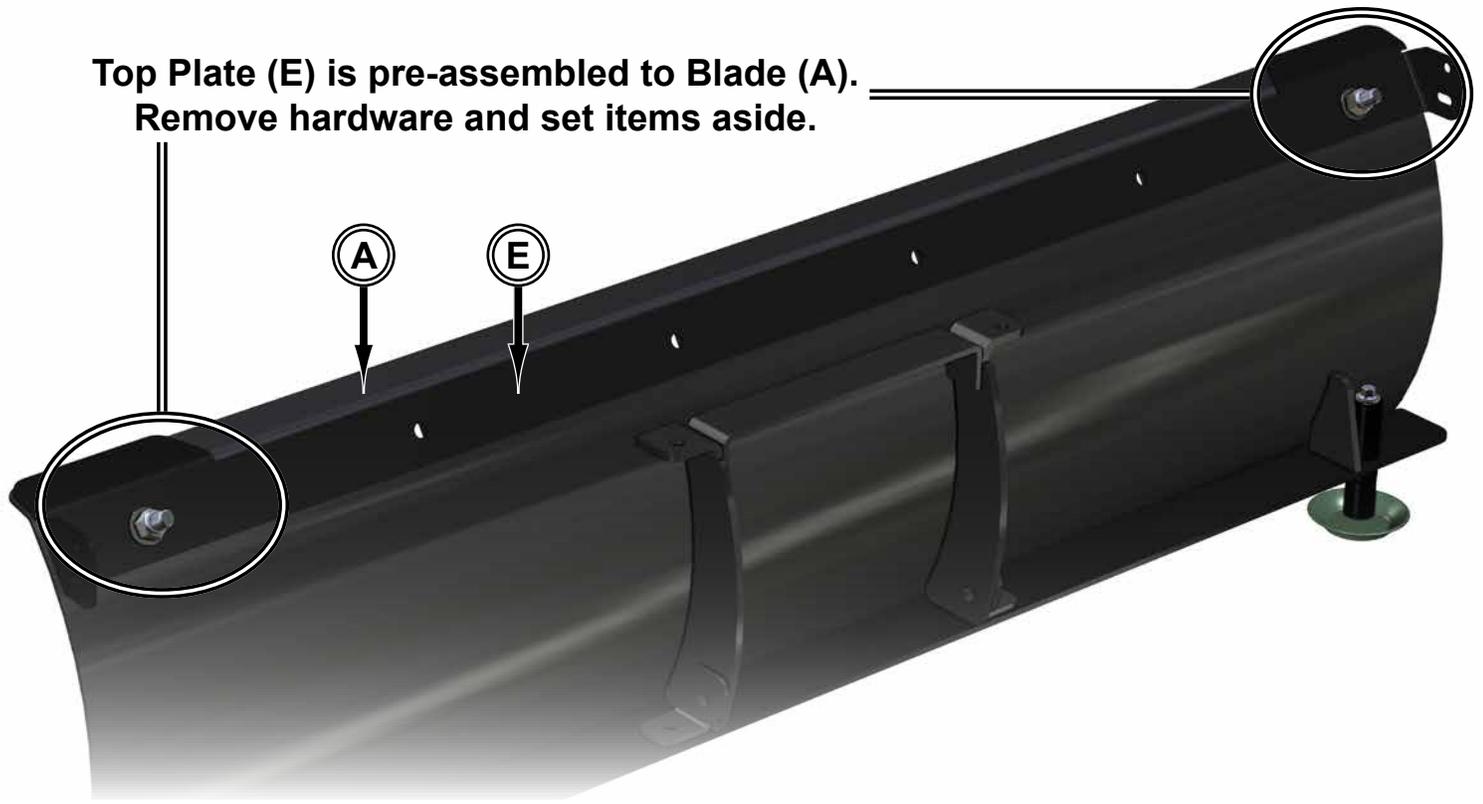

Installation: Do not tighten hardware completely unless noted.

1. Install Deflector (D) and Top Plate (E) to Blade (A) with M10-1.50 x 35mm Lg. CHCS and M10-1.50 Nylock Nuts. See Fig. 1.
2. Install Marker Tubes (C). Marker Tubes (A) pass through Top Plate (E), Deflector (D), and Blade (A). Secure with M8-1.25 x 25mm Lg. FHCS and M8-1.25 Nylock Nuts. See Fig. 2.

(illustrations continue on following pages)

hardware quantities will vary depending on Blade length

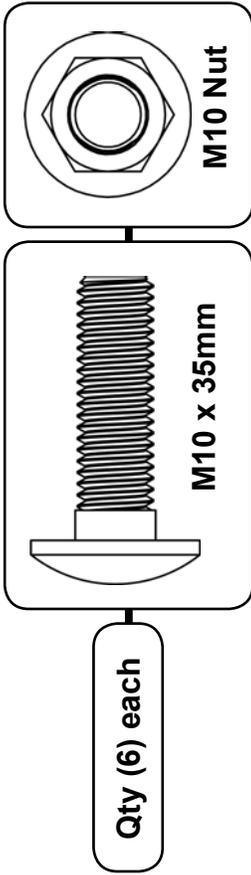


Fig. 1


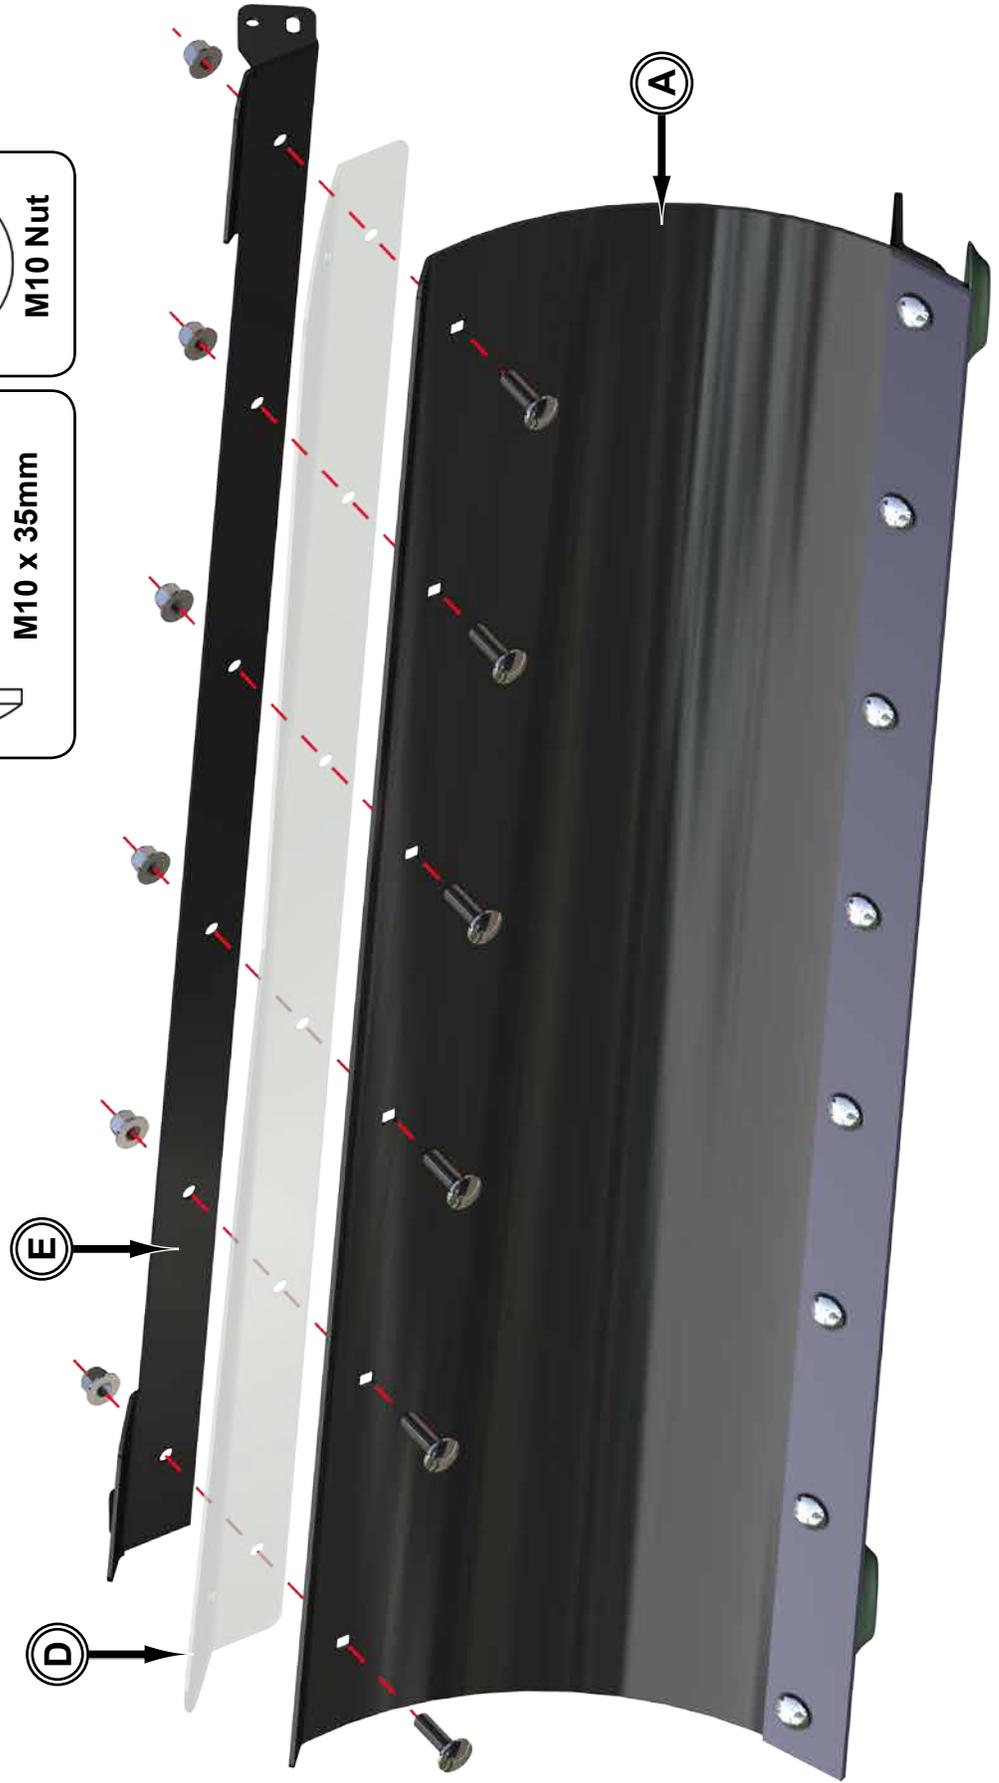



Fig. 2

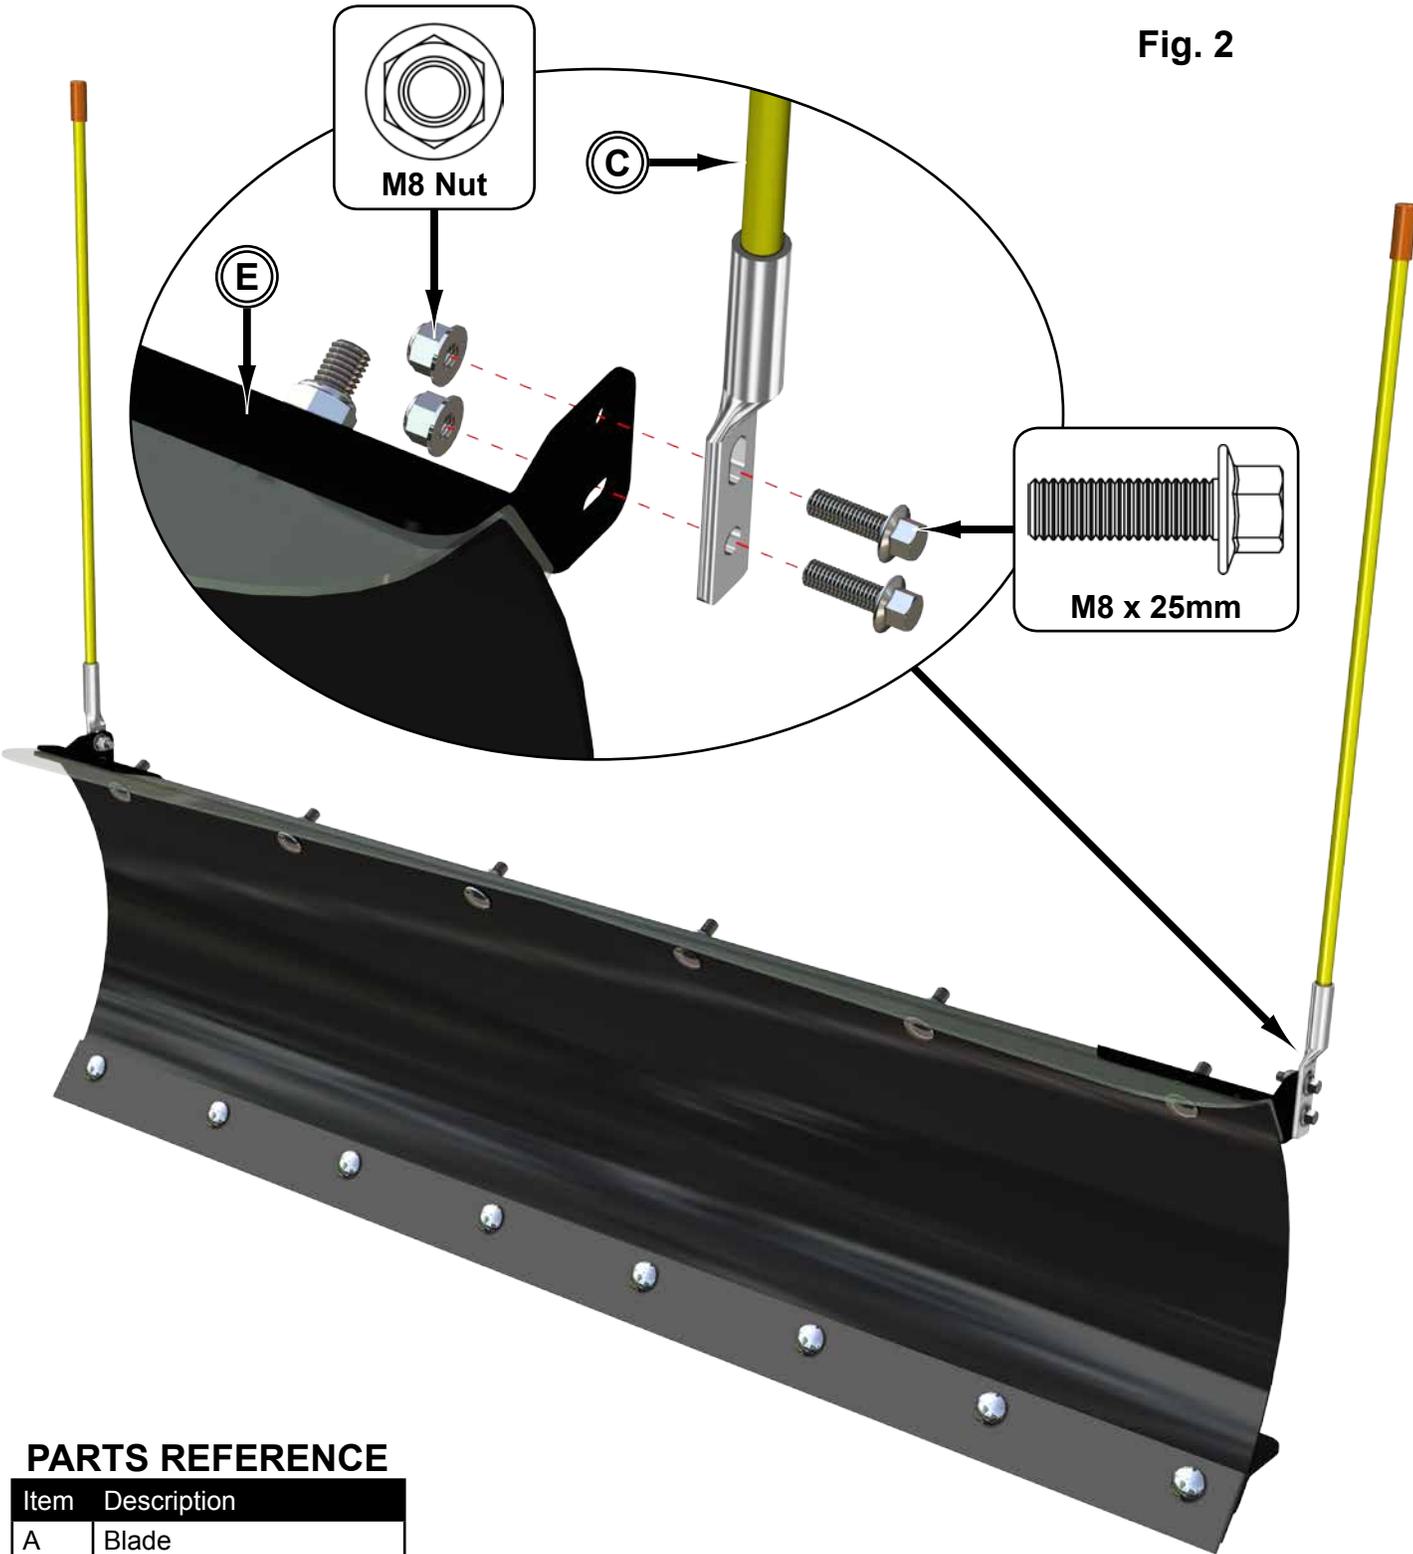


PARTS REFERENCE

Item	Description
A	Blade
B	Skid Pads
C	Marker Tubes
D	Deflector
E	Top Plate


Adjust Skid Pads (B) after Blade, Mount, and Frame are installed to machine.

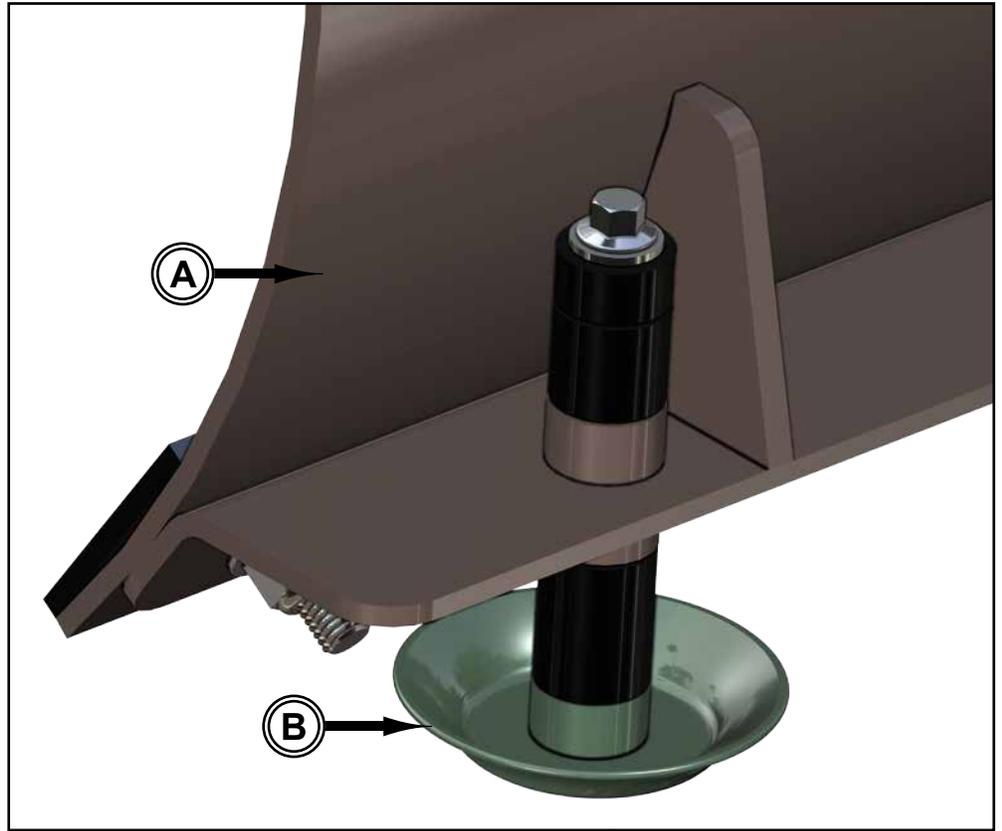

Use Loctite after adjustments have been made.

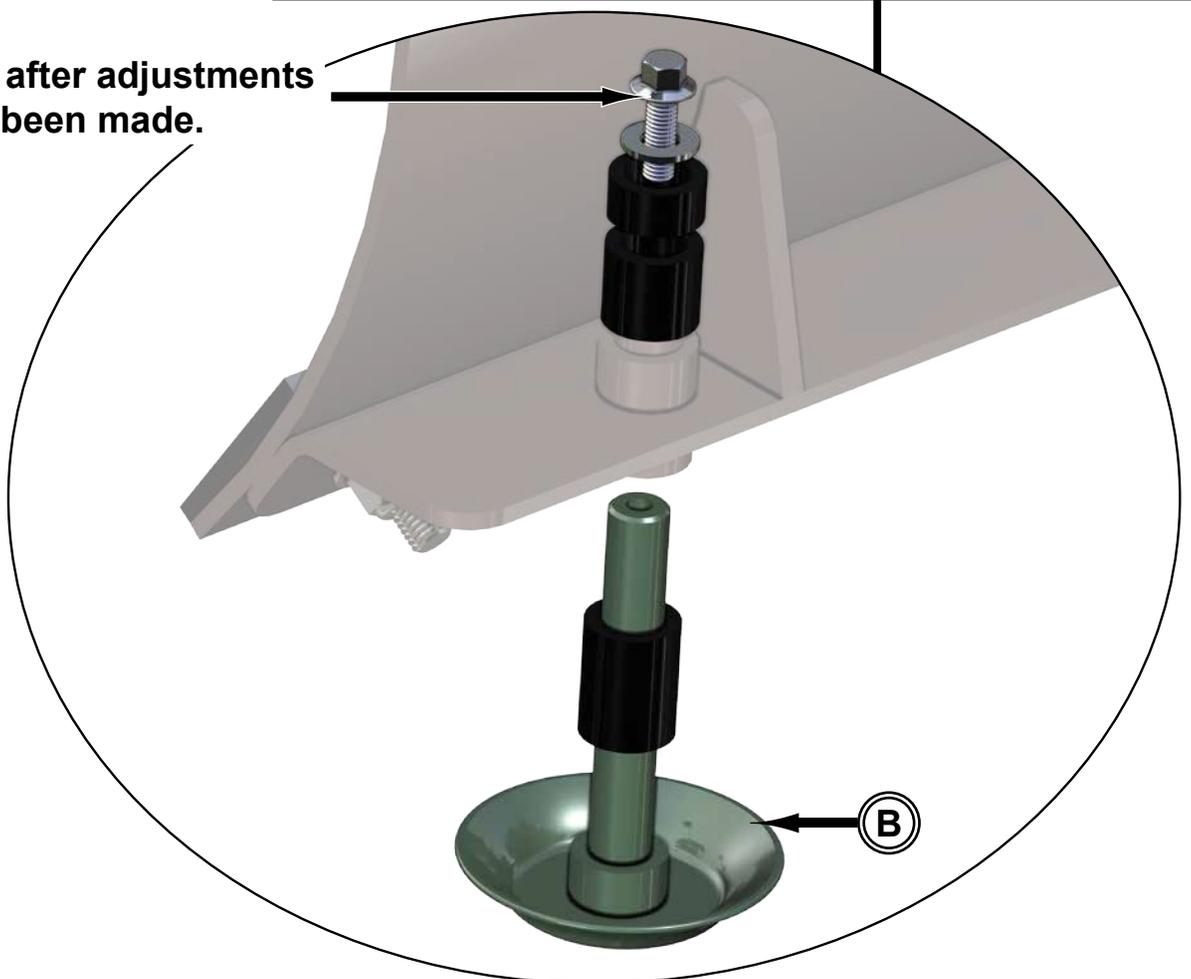


Mounting hardware and Plow Springs included with Frame

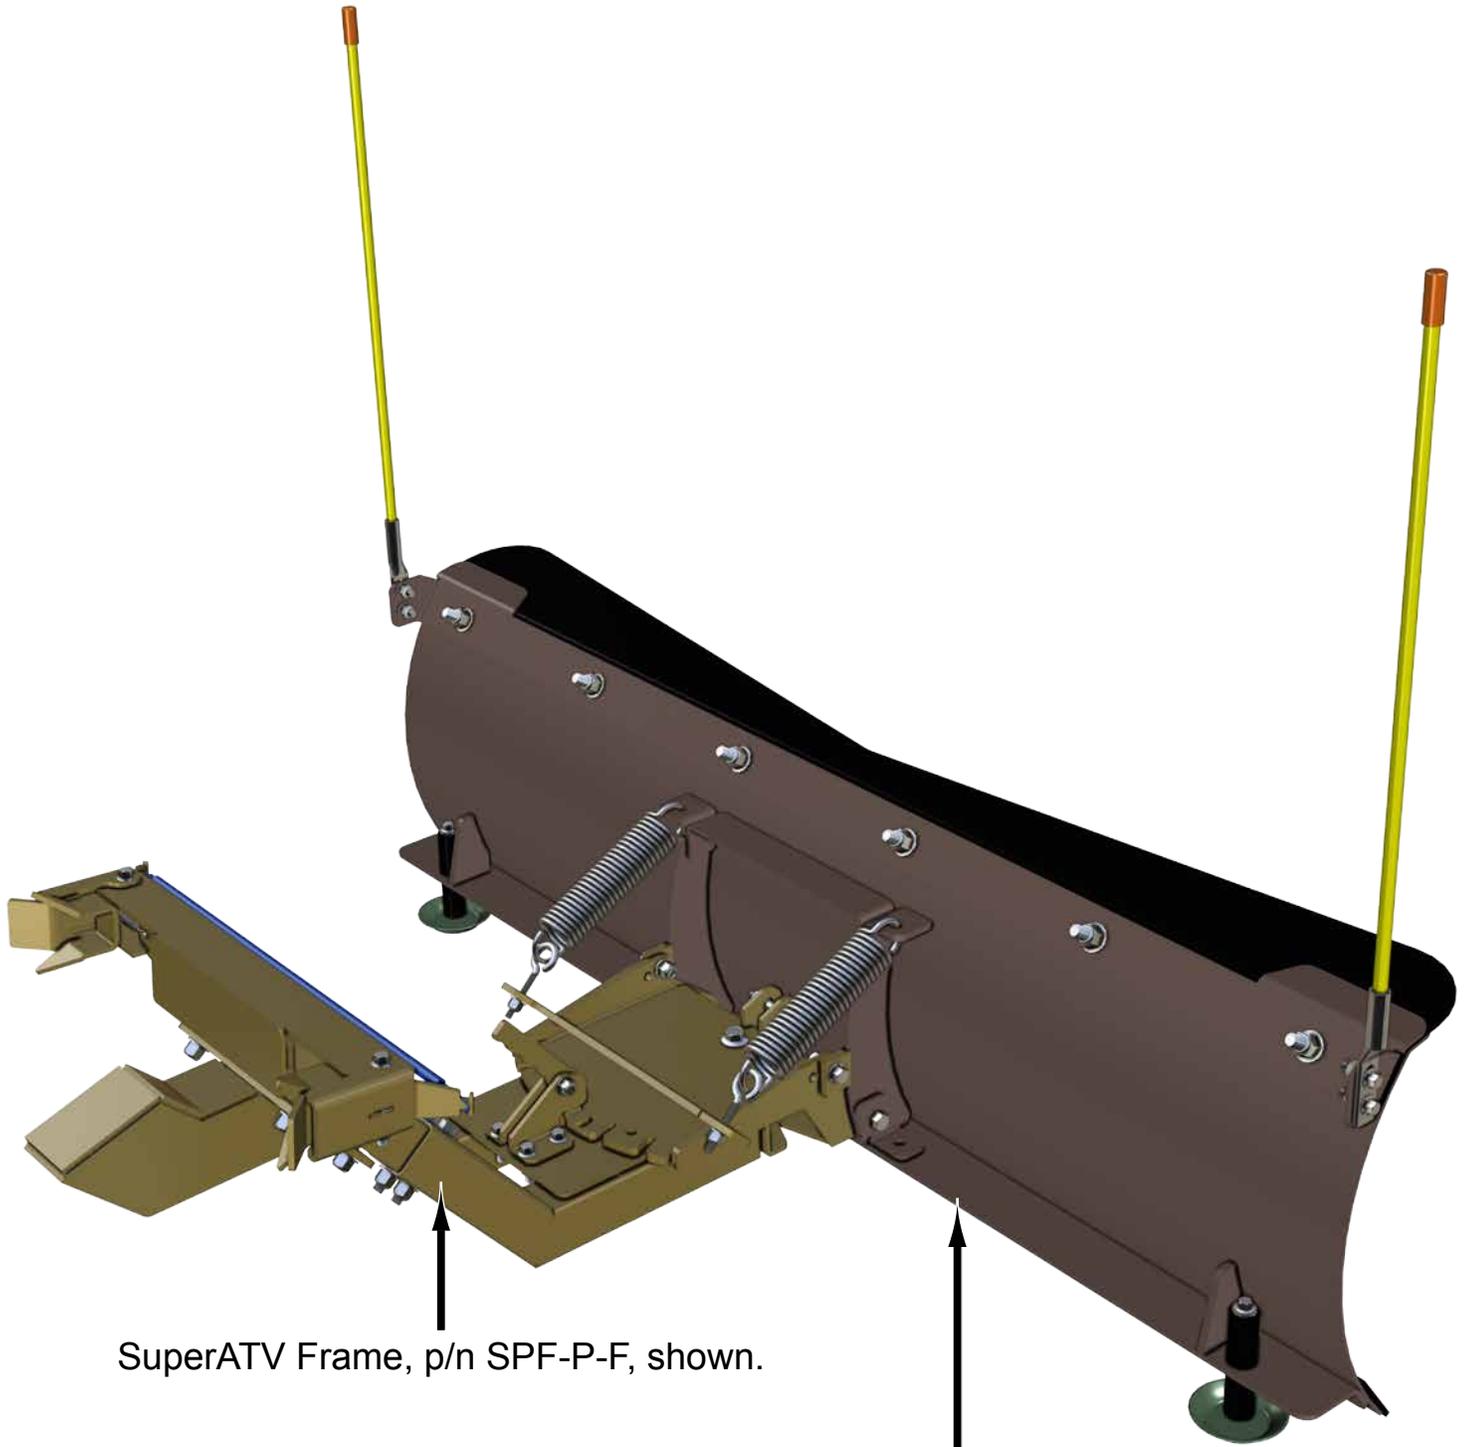

SuperATV Frame, p/n SPF-P-F, shown.

SuperATV 52" Blade, p/n SPB-P-52, shown.

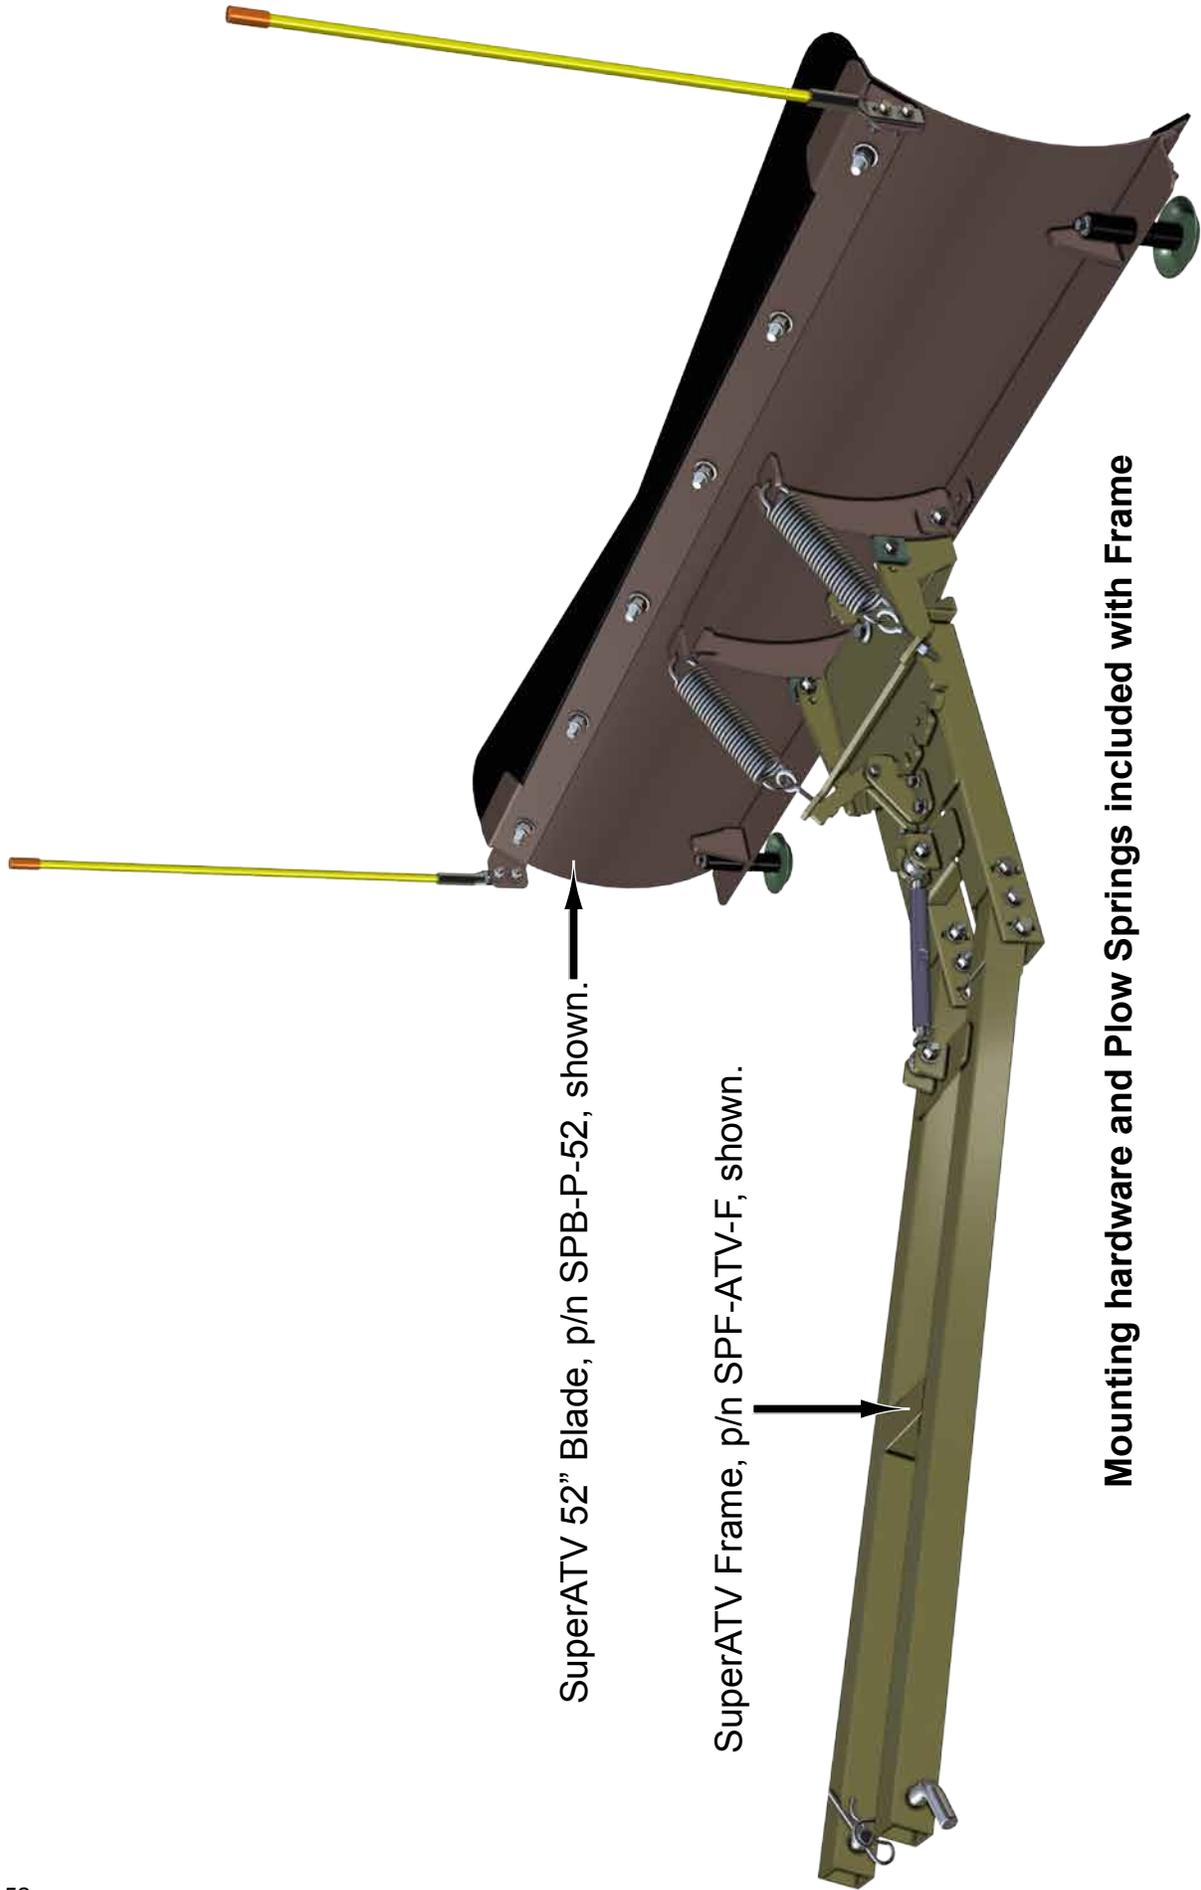

SuperATV 52" Blade, p/n SPB-P-52, shown. →

→ SuperATV Frame, p/n SPF-ATV-F, shown.


Mounting hardware and Plow Springs included with Frame

Notes:

- To reduce icing, allow Blade to reach same temperature as outdoors before beginning.
- Except for when pivoting Blade, always place Blade on ground before exiting vehicle.
- To Avoid damaging Blade, do not plow over pipes, roots, curbs, or other large objects.
- Treating Blade with automotive type paste wax will make snow easier to move off Blade.
- Inspect Blade for loose, worn, or damaged components before plowing. Correct any issues.
- Clean Blade after each use and before storing long term.
- Use touch up paint, or a light coat of oil or grease, on any bare metal.
- Lubricate all pivot points before each seasons use.
- Store Blade away from weather and in a dry area after each use.

Notes:

- Inspect Frame for loose, worn, or damaged components before plowing. Correct any issues.
- Clean Frame after each use and before storing long term.
- Lubricate all pivot points before each seasons use.

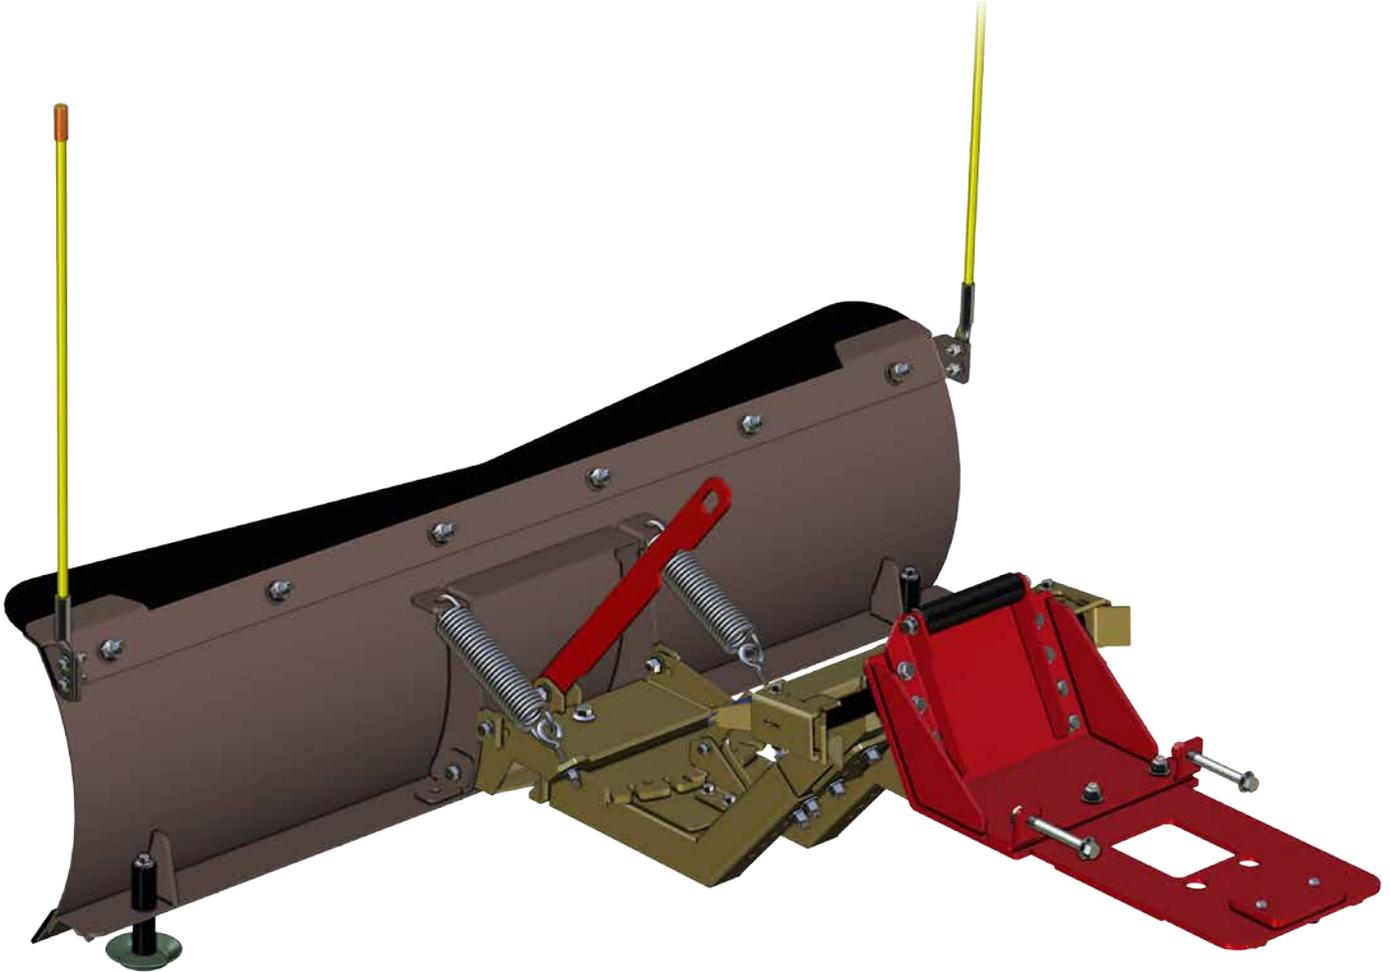

Read instructions and view illustrations before beginning.

Need help with your installation?



sales@superatv.com



www.superatv.com



1-812-574-7777



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Thank You

For Choosing

SUPERATV.COM[®]

Liability Statement


SuperATV's[®] products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV[®] and is not recommended. SuperATV's[®] products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV[®] to verify that they will work together.

Although SuperATV[®] has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV[®] urges operators and occupants to wear a helmet and appropriate riding gear at all times.


By purchasing and installing SuperATV[®] products, user agrees that should damages occur, SuperATV[®] will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV[®], nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV[®]. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV[®] will warranty only parts provided by SuperATV[®]. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV[®]. SuperATV[®] parts and products are not warranted if item was not installed properly, misused, or modified.


this surface to be parallel with ground

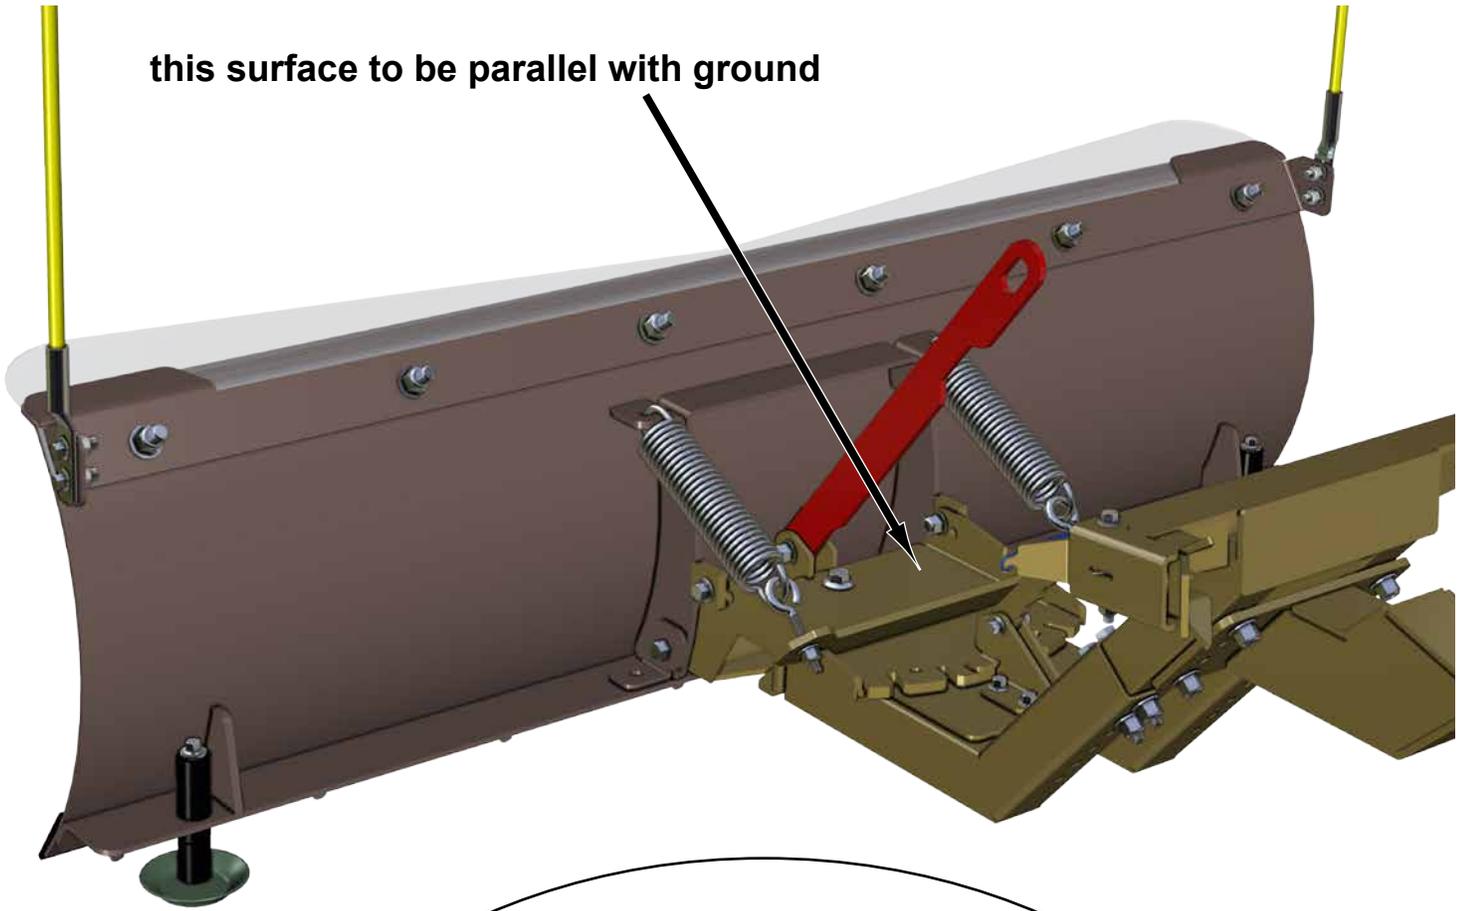


**Adjust height by
using different holes**

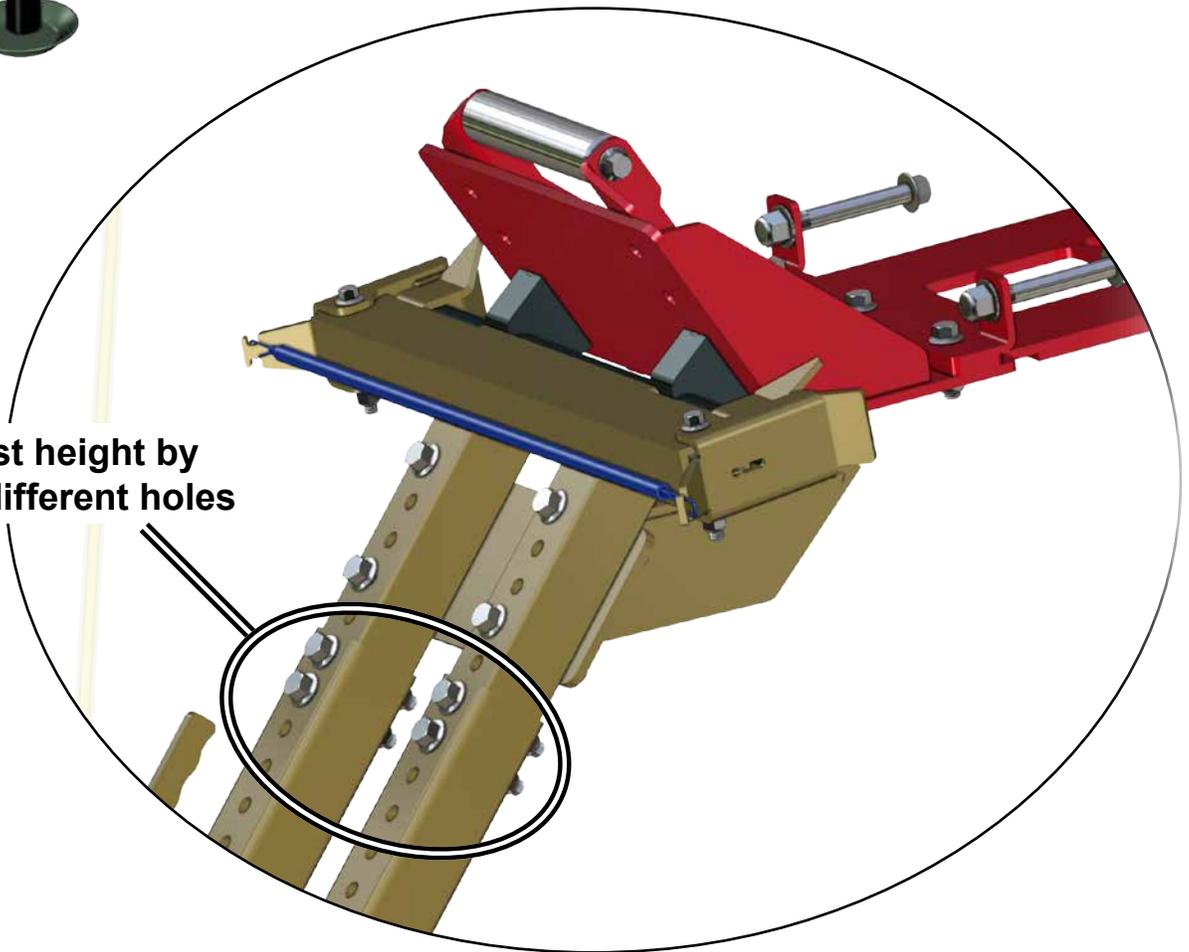


If Back Stop is used in this position, install Spacer Plate as shown.

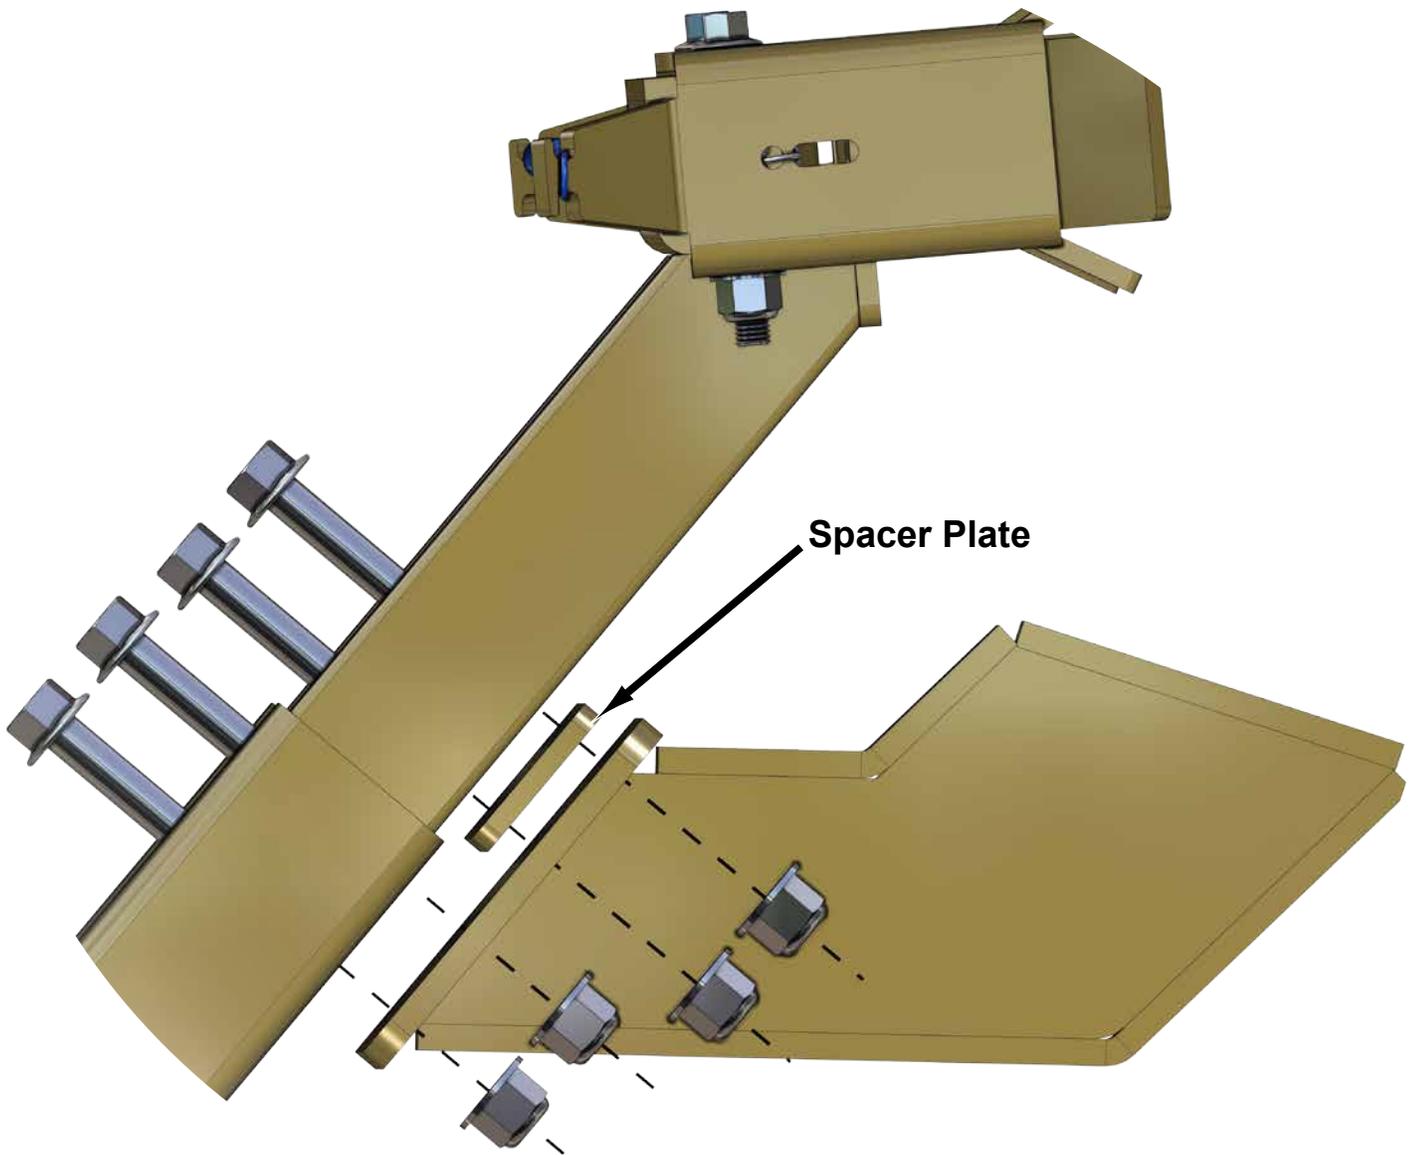

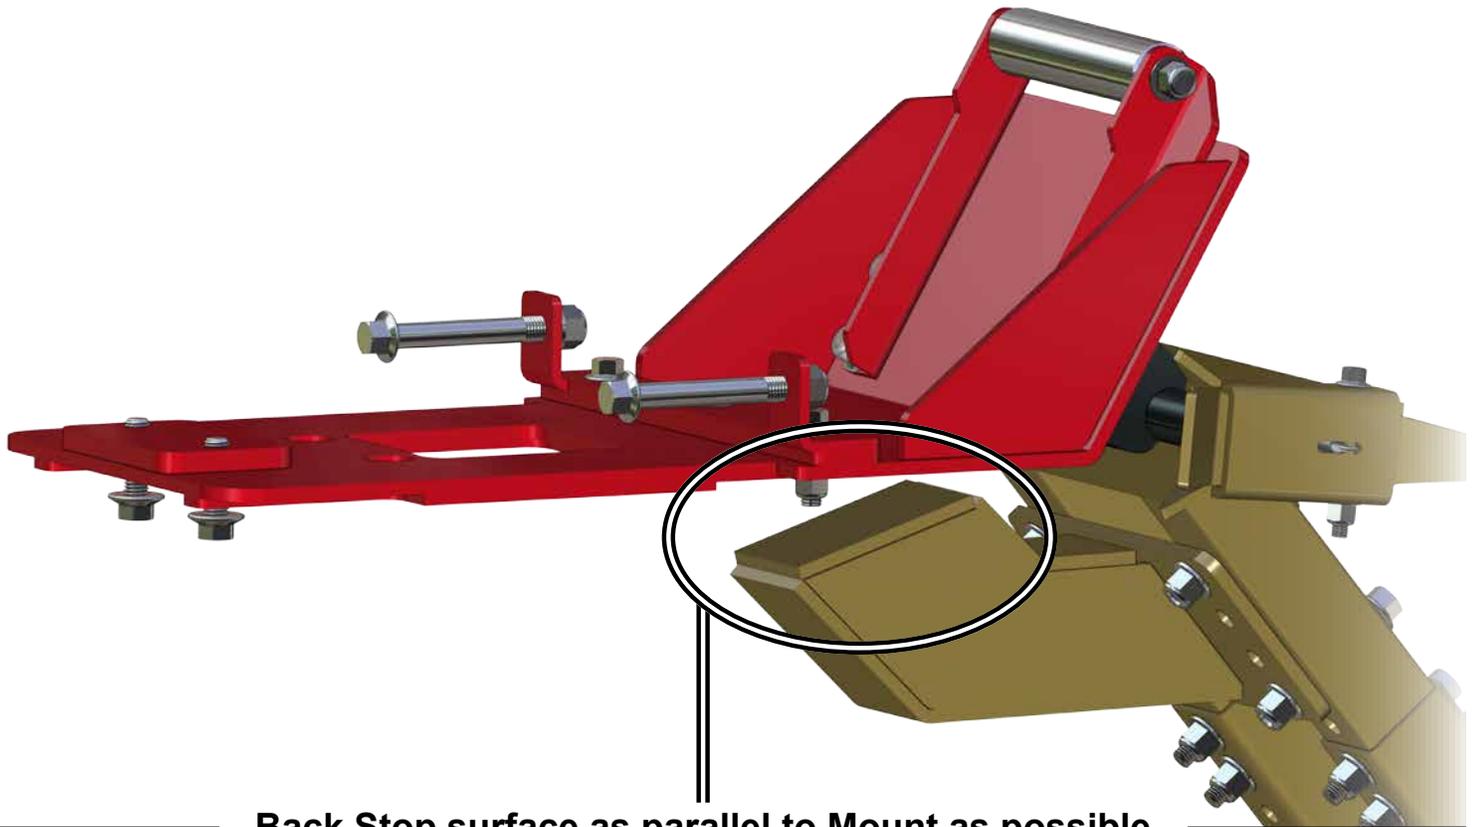

Back Stop surface as parallel to Mount as possible



Adjust Front Bar

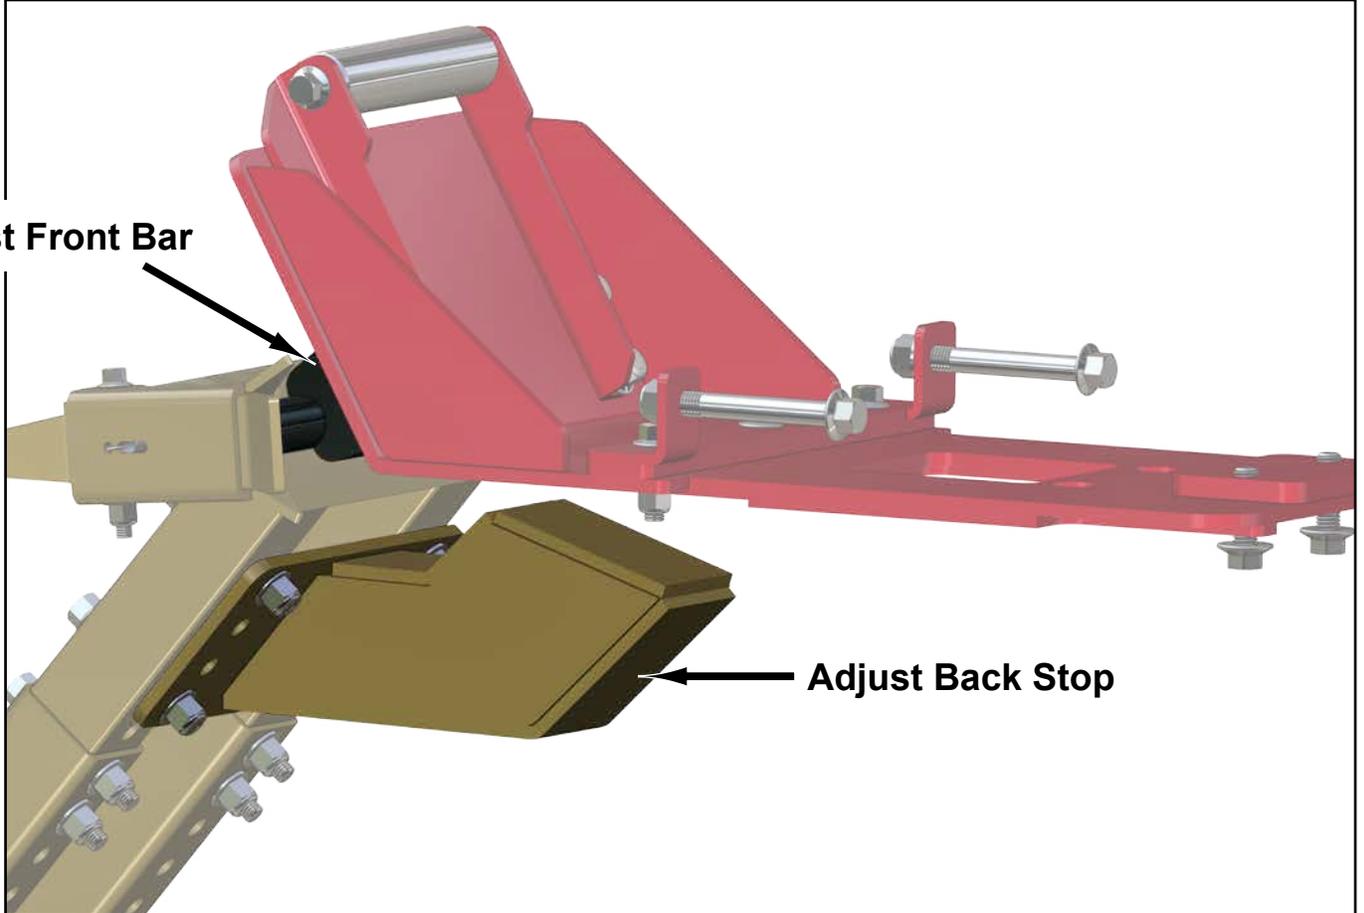

Adjust Back Stop

Use Skid Pads to adjust Blade height. Height will depend on what type of surface plowing will be performed on.

Blade to be level side-to-side

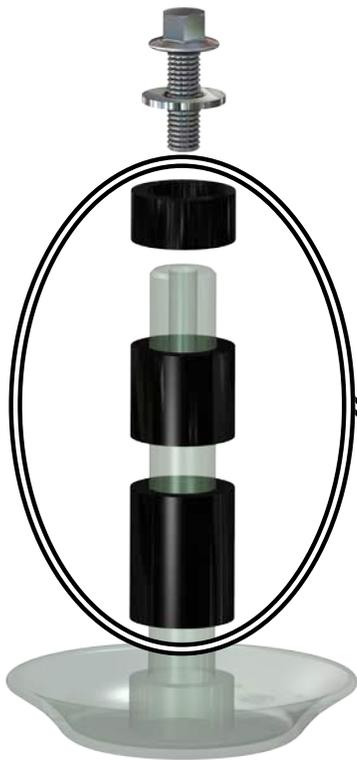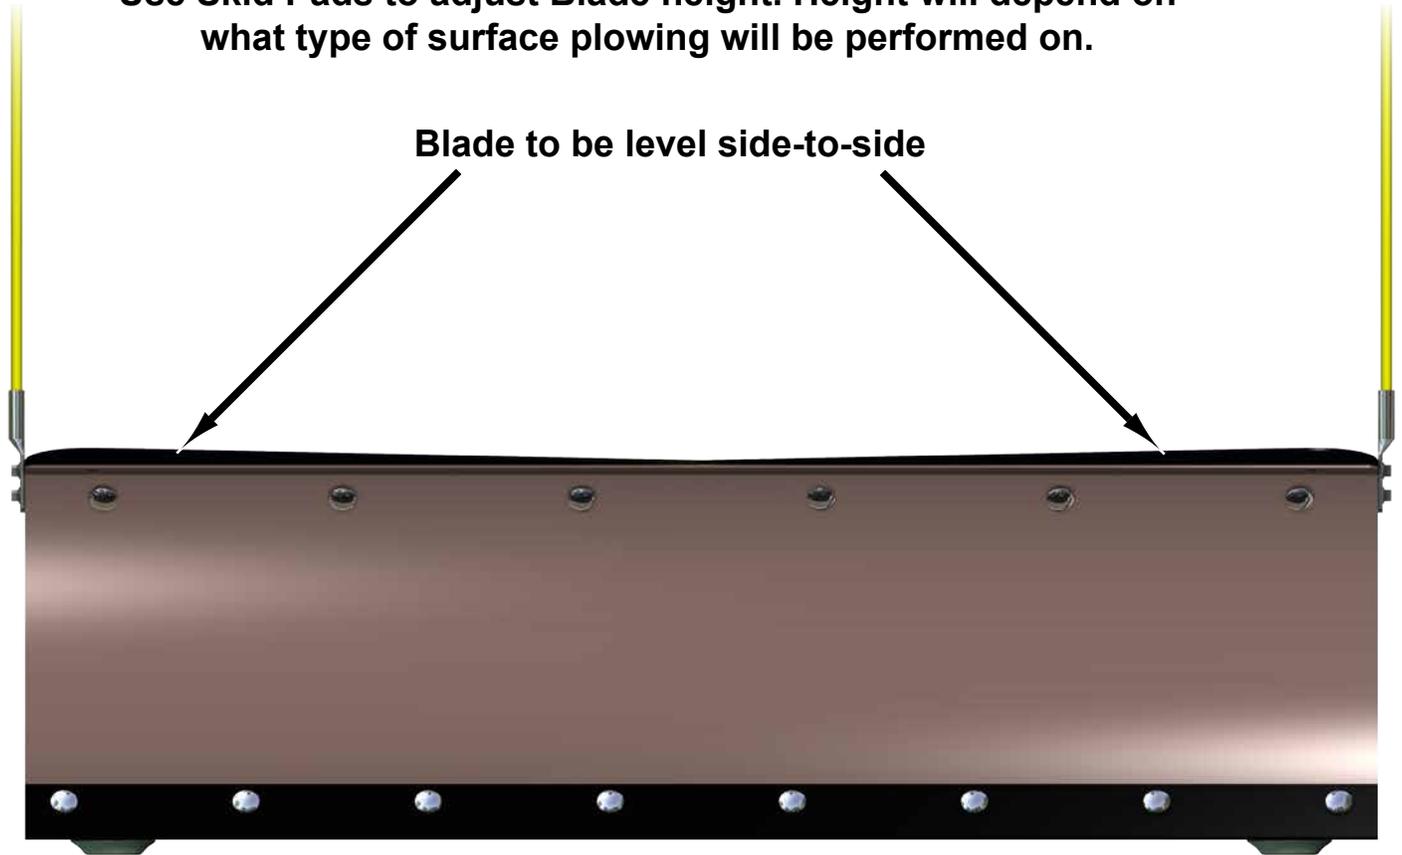

Use Spacers to adjust Skid Pads

